

FIVE STAR REDEMPTION

Haunted Adventure Series

SINGLE PLAYER TECHNICAL MANUAL

December 1, 2007



Features

- Bright Attention Grabbing Graphics & Cabinet
- Hot looking Lights
- Exciting Super Fast Skill Stop
- Oversized Highly Reliability Buttons
- Operator Programmable

Specifications

Parameter	Value	Units
Voltage	115	VAC
Frequency	60	HZ
Weight	600	Pounds

Overview

Haunted Mansion consists of five lighted clock faces with motorized spinning swords, a player console with large buttons and numeric display for game play, speakers for sound effects, two coin dispensers, and a ticket dispenser. The objective is to skillfully stop the sword so that it points to a desirable position to maximize the number of points won.

TABLE OF CONTENTS

<i>Features</i>	1
<i>Specifications</i>	1
<i>Overview</i>	1
TABLE OF CONTENTS	2
<i>Game Play</i>	4
<i>Program Mode</i>	5
Statistical Information Calculations	7
Changing or Viewing Miscellaneous Settings.....	8
Resetting the Statistics.....	9
Diagnostics 71 – 75	10
Diagnostic 71- 75 Position Type & Pie Slice Definition	10
How To Run Diagnostics 71 – 75 Calibrating Spinners.....	11
Step’s 71 – 75 Diagnostic Layout.....	11
Troubleshooting Steps for Diagnostics 71 - 75.....	11
Running Diagnostics 76.....	12
Checking Spinner Motor, and Brake	12
Step 76 Diagnostic Layout	12
Troubleshooting Steps for Diagnostic 76	13
Running Diagnostics 77.....	13
Display Keypad Inputs	13
Running Diagnostics 78.....	13
Testing Ticket Dispenser	13
Troubleshooting Steps for Diagnostic 78	13
Running Diagnostics 79.....	14
Testing for Spinner Intermittent Problems	14
Step 79 Diagnostic Layout	14
Troubleshooting Steps for Diagnostic 79	14
Viewing Additional Statistical Information’s Steps 80 - 87	15
Statistical Information Steps 80 - 87	15
STEP 99 Viewing Software Version	16
View and Changing Spinner Target Values	17
Viewing and Changing Spinner Target Values Steps 100 – 576.....	17
<i>Wiring Diagrams</i>	28
Top Level Interconnections	28
Appendix A	54
Self diagnostic #1 TEST Layout.....	54
Self Diagnostic #1	55
Self Diagnostic #1 ERROR CODE CHART	55
Self diagnostic #2 TEST Layout.....	56
Self Diagnostic #2	57
Self Diagnostic #2 ERROR CODE CHART	57

Appendix B	58
Troubleshooting Guide	58
Appendix C Replacing or Realigning Spinner Wheels	61
Appendix D	64
Technical Assistance	64
Five Star Redemption	65
8835 Shirley Avenue	65
Northridge, CA 91324	65
(818) 773-6057 Fax (818) 773-6064	65
Parts Department Option 1	65
Technical Support Option 2	65
Sales Department Option 3	65

Game Play

Haunted Mansion offers very fast and interesting play with many different strategies for maximizing the points you can win. There are *Multiple Spinners*, which allow the player to obtain a higher value of points as they go up from one spinner to the next.


- 1) Insert coin(s) to ready the game for play.
- 2) Push the *Start Button* to begin the *Spinner Spinning*.
- 3) There are several seconds in which to influence where the *Spinner* will stop by skillfully pushing the *Stop* and the *Slow Stop* button.
- 4) Points can be awarded and are displayed each time the *Spinner* is spun, however, you may choose to go to the next level and take the points.
- 5) Going to the next level increases the amount of points that can be awarded.

Program Mode

Program Mode allows the Game Operator the option of programming the Game by entering data through the Control Panel, which is located on the front panel of the cabinet. This mode includes viewing the game's statistical data, running diagnostics, and changing game play values.

To go into *Program Mode*, Hold Down both the '*' and '#' symbols for approximately 5 seconds the Keypad Display should go Blank, next enter the number "11" which will allow the game operator to go into *Program Mode* (Keypad should display all zero's).

Pressing the **FAST STOP BUTTON** will decrement the Value, Pressing the **SLOW STOP BUTTON** will increment the value. To increase the **STEP NUMBER** use the Numeric Keypad and press the '*', to decrease the **STEP NUMBER** press the '#' symbol. To Go to **STEPS** directly Hold down the "*" key while entering the **STEP NUMBER** in the keypad. Pressing the *Program Mode* or Holding Down both the '*' and '#' symbols will allow the operator to exit. The program button is located near the main board inside of the cabinet.

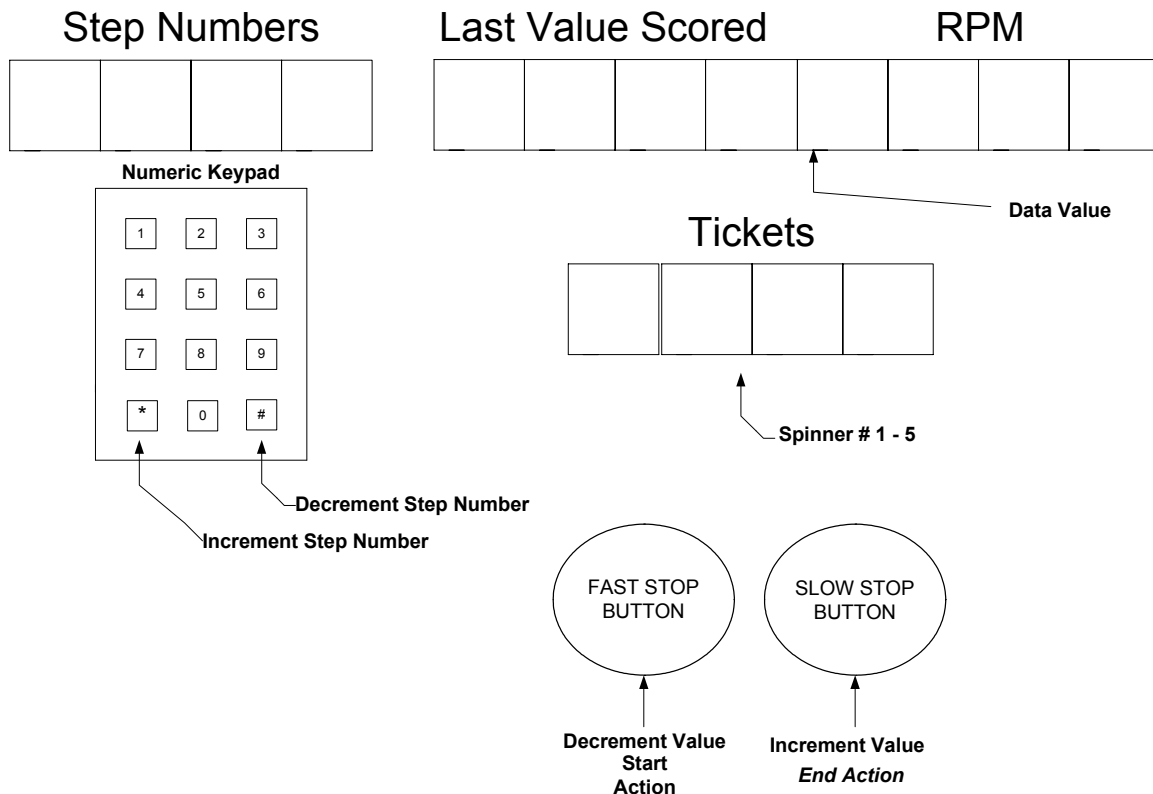

VIEWING STASTICAL INFORMATION

To increase the **STEP NUMBER** use the Numeric Keypad and press the ‘*’, to decrease the **STEP NUMBER** press the ‘#’ symbol. To Go to **STEPS** directly Hold down the “*” key while entering the **STEP NUMBER** in the keypad. To View Spinner’s 1 – 5 Data Press the **SLOW STOP BUTTON** to cycle through each spinner.

STEP #	DESCRIPTION
0	COINS TAKEN IN (SINCE RESET)
1	COINS TAKEN IN (LIFETIME)
2	TOTAL SPINS (SINCE RESET)
3	TOTAL SPINS (LIFETIME)
4	POINTS WON (SINCE RESET)
5	POINTS WON (LIFETIME)
6	CREDITS (SINCE RESET)
7	CREDITS (LIFETIME)
8	AVERAGE POINTS PER CREDIT (SINCE RESET)
9	AVERAGE POINTS PER CREDIT (LIFETIME)
10	AVERAGE SPINS PER CREDIT (SINCE RESET)
11	AVERAGE SPINS PER CREDIT LIFETIME)
12	TIMES SPINNER TAMPERED1-5 (SINCE RESET)
13	TIMES SPINNER TAMPERED1-5 (LIFETIME)
14	NUMBER OF TIMES SPINNER SPUN 1-5 (SINCE RESET)
15	NUMBER OF TIMES SPINNER SPUN 1-5 (LIFETIME)
16	NUMBER OF TIMES SPINNER JACKPOT1-5 (SINCE RESET)
17	NUMBER OF TIMES SPINNER JACKPOT1-5 (LIFETIME)
18	NUMBER OF TICKETS DISPENSED (SINCE LAST RESET)
19	NUMBER OF TICKETS DISPENSED (LIFETIME)
20	NUMBER OF TOTAL POINTS SPINNER # 1 – 5 (SINCE RESET)
21	NUMBER OF TOTAL POINTS SPINNER # 1 – 5 (LIFETIME)
22	AVERAGE NUMBER OF POINTS PER SPIN FOR SPINNER #1 – 5 (SINCE RESET)
23	AVERAGE NUMBER OF POINTS PER SPIN FOR SPINNER #1 – 5 (LIFETIME)
24	NUMBER OF TIMES SPINNER STOPPED ON POSITION WITH POINTS (SINCE RESET)
25	NUMBER OF TIMES SPINNER STOPPED ON POSITION WITH POINTS (LIFETIME)
26	AVERAGE NUMBER OF POINTS PER CREDIT FROM SPINNERS #1 – 5 (SINCE RESET)
27	AVERAGE NUMBER OF POINTS PER CREDIT FROM SPINNERS #1 – 5 (LIFETIME)

STATISTICAL INFORMATION CALCULATIONS

$$\text{Step \# 8} \quad \text{Average Points per Credit} = \frac{\text{Points Won (Step 4)}}{\text{Credits (Step 6)}}$$

Resettable

$$\text{Step \# 9} \quad \text{Average Points per Credit} = \frac{\text{Points Won (Step 5)}}{\text{Credits (Step 7)}}$$

Lifetime

$$\text{Step \# 10} \quad \text{Average Number Spins} = \frac{\text{Total Spins (Step 2)}}{\text{Credits (Step 6)}}$$

Resettable

$$\text{Step \# 11} \quad \text{Average Number Spins} = \frac{\text{Total Spins (Step 3)}}{\text{Credits (Step 7)}}$$

Lifetime

Changing or Viewing Miscellaneous Settings

CHANGING OR VIEWING MISCELLANEOUS SETTINGS

Pressing the **SLOW STOP BUTTON** will increment the Value, Pressing the **START BUTTON** will decrement the value.

STEP #	DESCRIPTION
30	NUMBER OF COINS REQUIRED TO PLAY
31	NUMBER OF SECONDS ATTRACTION AUDIO IS ON PER ATTRACTION CYCLE (0 DISABLES ATTRACTION AUDIO)
32	NUMBER OF SECONDS ATTRACTION AUDIO IS OFF PER ATTRACTION CYCLE
33	SPINNER#1 MINIMUM SPINNER SPEED TO ENABLE SLOW/FAST STOP BUTTONS WHEN RAMPING SPEED UP (INCREMENTS OF 10)
34	SPINNER#2 MINIMUM SPINNER SPEED TO ENABLE SLOW/FAST STOP BUTTONS WHEN RAMPING SPEED UP (INCREMENTS OF 10)
35	SPINNER#3 MINIMUM SPINNER SPEED TO ENABLE SLOW/FAST STOP BUTTONS WHEN RAMPING SPEED UP (INCREMENTS OF 10)
36	SPINNER#4 MINIMUM SPINNER SPEED TO ENABLE SLOW/FAST STOP BUTTONS WHEN RAMPING SPEED UP (INCREMENTS OF 10)
37	SPINNER#5 MINIMUM SPINNER SPEED TO ENABLE SLOW/FAST STOP BUTTONS WHEN RAMPING SPEED UP (INCREMENTS OF 10)
38	SPINNER#1 MINIMUM SPINNER SPEED TO ENABLE FAST STOP BUTTONS WHEN RAMPING SPEED DOWN (INCREMENTS OF 10)
39	SPINNER#2 MINIMUM SPINNER SPEED TO ENABLE FAST STOP BUTTONS WHEN RAMPING SPEED DOWN (INCREMENTS OF 10)
40	SPINNER#3 MINIMUM SPINNER SPEED TO ENABLE FAST STOP BUTTONS WHEN RAMPING SPEED DOWN (INCREMENTS OF 10)
41	SPINNER#4 MINIMUM SPINNER SPEED TO ENABLE FAST STOP BUTTONS WHEN RAMPING SPEED DOWN (INCREMENTS OF 10)
42	SPINNER#5 MINIMUM SPINNER SPEED TO ENABLE FAST STOP BUTTONS WHEN RAMPING SPEED DOWN (INCREMENTS OF 10)
43	SPINNER#1 MAXIMUM RPM (INCREMENTS OF 25)
44	SPINNER#2 MAXIMUM RPM (INCREMENTS OF 25)
45	SPINNER#3 MAXIMUM RPM (INCREMENTS OF 25)
46	SPINNER#4 MAXIMUM RPM (INCREMENTS OF 25)
47	SPINNER#5 MAXIMUM RPM (INCREMENTS OF 25)
48	SPINNER MAXIMUM TIME. THE TIME IN SECONDS BEFORE POWER IS REMOVED FROM SPINNER MOTOR (INCREMENTS OF 5)
49	SPIN UNTIL YOU WIN 0=COMPLEX GAME PLAY 1=SPIN UNTIL PLAYER GETS POINTS
50	MAXIMUM NUMBER SPINS (INCREMENTS OF 1)
51	FAST STOP PUMPING IS ENABLED WHEN SET TO 1
52	NUMBER OF POINTS REQUIRED PER TICKET DISPENSED (INCREMENTS OF 1)
53	SPINNER TIMEOUT IF PLAYER DOES NOT PUSH START BUTTON (INCREMENTS OF 1)
54	MUST PAY TO GO HIGHER 0 = START SPINNER HIGHER AUTOMATIC, 1 = PLAYER MUST USE A CREDIT TO GO HIGHER
55	EXTRA GAMES DISABLE. DISABLE EXTRA GAMES FOR HIGHER AMOUNTS OF COINS DEPOSITED (1 = DISABLE EXTRA GAME, 0 = ENABLE)
56	DEMO MODE 0 = NOT DEMO MODE 1 = DEMO MODE

Changing or Viewing Miscellaneous Settings

STEP #	DESCRIPTION
57	ENABLE KEYPAD DISPLAY 0 = DO NOT ENABLE KEYPAD IN GAME MODE 1 = ENABLE KEYPAD IN GAME MODE
58	DISABLE GOING UP SOUND 0 = PLAY GOING UP SOUND 1 = DO NOT PLAY GOING UP SOUN
59	PLAY INSTRUCTIONS DURING ATTRACTION 0 – DO NOT PLAY INSTRUCTION SOUNDS 1 – PLAY INSTRUCTION SOUNDS
60	TIMEOUT TO GO HIGHER TIME IN SECONDS BEFORE GAME ENDS IF PLAYER DOES NOT SELECT OPTION TO GO HIGHER

RESETTING THE STATISTICS


Pressing the **FAST STOP BUTTON** will execute the reset.

STEP #	DESCRIPTION
70	RESET STATISTICS

Running Diagnostics 71 - 79

DIAGNOSTICS 71 – 75

During calibration (Steps 71-75)
position pointer here

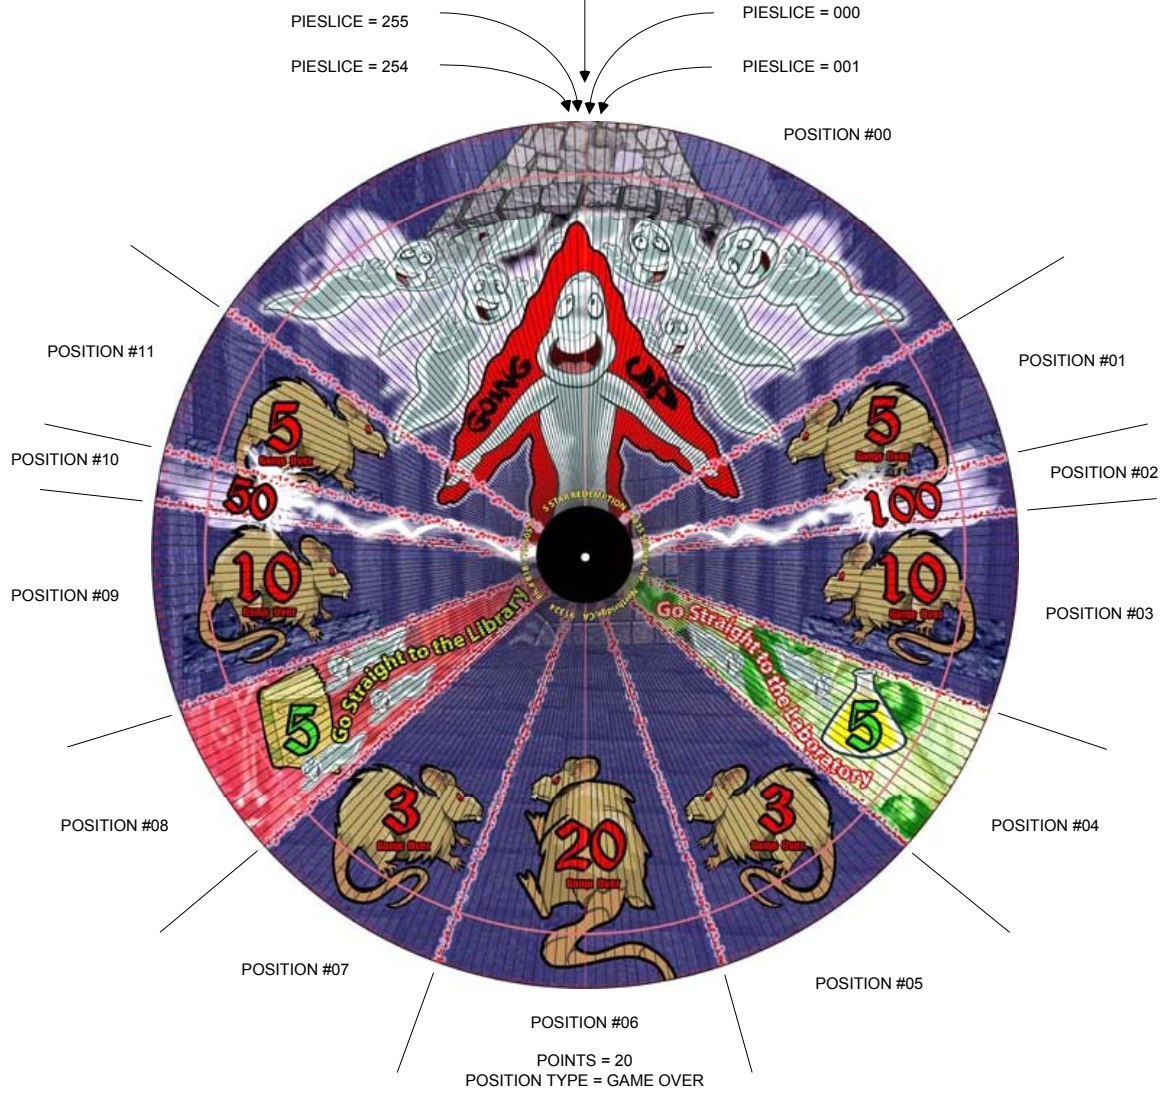


Diagnostic 71- 75 Position Type & Pie Slice Definition

Running Diagnostics 71 - 79

HOW TO RUN DIAGNOSTICS 71 – 75 CALIBRATING SPINNERS

Displays Spinner Information Pie Slices 0-255, Position Type, Points, and Position Number.
Pressing the **START BUTTON** will execute the **Calibration of the Spinner**.

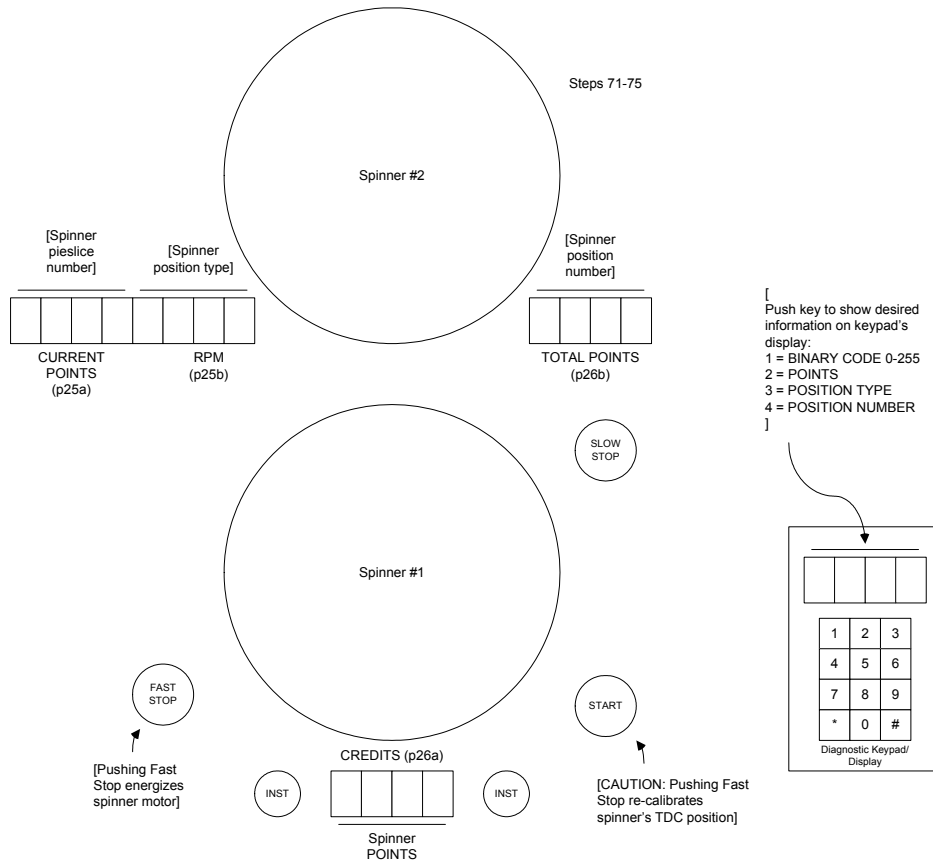

Step's 71 – 75 Diagnostic Layout


Troubleshooting Steps for Diagnostics 71 - 75

Problem	Solution
Pie Slice is not zero when spinner is pointing straight up to TDC (top dead center)	<ul style="list-style-type: none"> Recalibrate to TDC by manually positioning pointer straight up and pushing Start button (spinner may be energized by momentarily pushing Fast Stop pushbutton)
Wrong Pie Slice 0-255, Pie Slice number should increase smoothly from 0 to 255 as spinner is rotated clockwise	<ul style="list-style-type: none"> Verify spinner board switches are set correctly Examine/reseat wiring harness connections to spinner board
Wrong Position Number, Position Number should increase smoothly from 0 as spinner is rotated clockwise through each Spinner Position	<ul style="list-style-type: none"> Verify spinner board switches are set correctly Examine/reseat wiring harness connections to spinner board Recalibrate to TDC (top dead center) by manually positioning pointer straight up and pushing Fast Stop button

RUNNING DIAGNOSTICS 76

Checking Spinner Motor, and Brake

Push **Left Instruction Pushbutton** to select desired spinner to test. The number of the selected spinner is shown on the RPM display. Push the **Fast Stop Pushbutton** to energize the spinner brake and the **Start Pushbutton** to energize the spinner motor. Hold down the **Slow Stop Pushbutton** while pushing the **Start Pushbutton** to cause the spinner to spin more slowly. Perform the troubleshooting steps in the sequence specified in Troubleshooting Steps for Diagnostic 76 on next page.

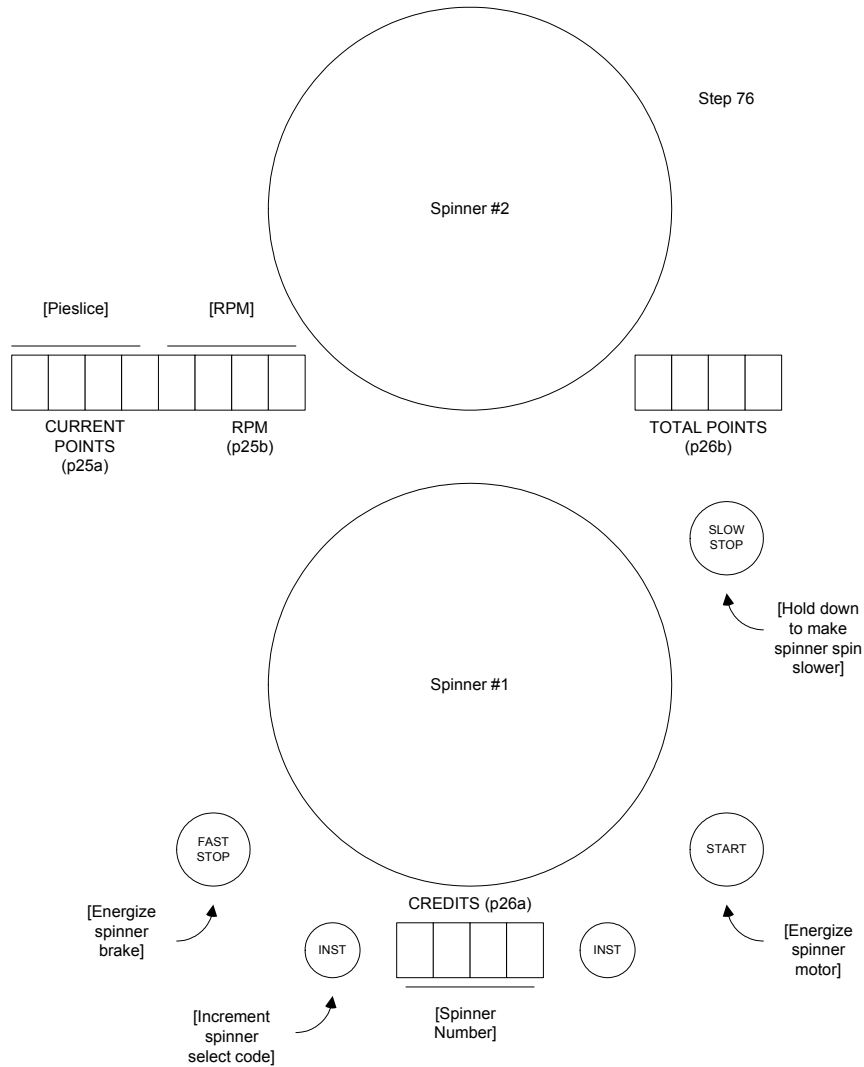

Step 76 Diagnostic Layout

Running Diagnostics 71 - 79

TROUBLESHOOTING STEPS FOR DIAGNOSTIC 76

Problem	Solution
Particular spinner(s) do not spin	<ul style="list-style-type: none"> • Verify spinner board switches are set correctly • Examine/reseat wiring harness connections to spinner boards • Swap spinner boards to see if problem moves with the boards and replace any spinner board found to be defective (be sure board switches are set correctly) • Replace spinner motor and retest
Particular brake(s) do not activate	<ul style="list-style-type: none"> • Verify spinner board switches are set correctly • Examine/reseat wiring harness connections to spinner boards • Swap spinner boards to see if problem moves with the boards and replace any spinner board found to be defective (be sure board switches are set correctly) • Adjust/replace spinner brake and retest
All spinners do not spin	<ul style="list-style-type: none"> • Examine/reseat wiring harness connections to spinner boards • Look for low-voltage changes at VTmux board output when spinner should be spinning and if voltage does not change, replace VTmux board and retest
All brakes do not activate	<ul style="list-style-type: none"> • Examine/reseat wiring harness connections to spinner boards • Look for low-voltage changes at VTmux board output when brake should be activated and if voltage does not change, replace VTmux board and retest

RUNNING DIAGNOSTICS 77

Display Keypad Inputs

Push each of the individual numbers on the keypad to display the associated keypad number.

RUNNING DIAGNOSTICS 78

Testing Ticket Dispenser

Push the Flashing **Call Attendant Pushbutton** to Dispense a Single Ticket.

Troubleshooting Steps for Diagnostic 78


Problem	Solution
Does not dispense tickets	<ul style="list-style-type: none"> • Clear ticket dispenser of any jammed tickets • Load tickets if empty • Try dispensing a ticket using diagnostic mode, if ticket does not dispense: <ul style="list-style-type: none"> ○ Check wiring harness ○ Replace ticket dispenser and retest ○ Replace VTmux board and retest

Running Diagnostics 71 - 79

RUNNING DIAGNOSTICS 79

Testing for Spinner Intermittent Problems

Check for spinner intermittent problems while spinners are spinning. Momentarily press keypad 1-5 to begin test on selected spinner. **Press Keypad 0** to stop test. Perform the troubleshooting steps in the sequence Troubleshooting Steps for Diagnostic 79.

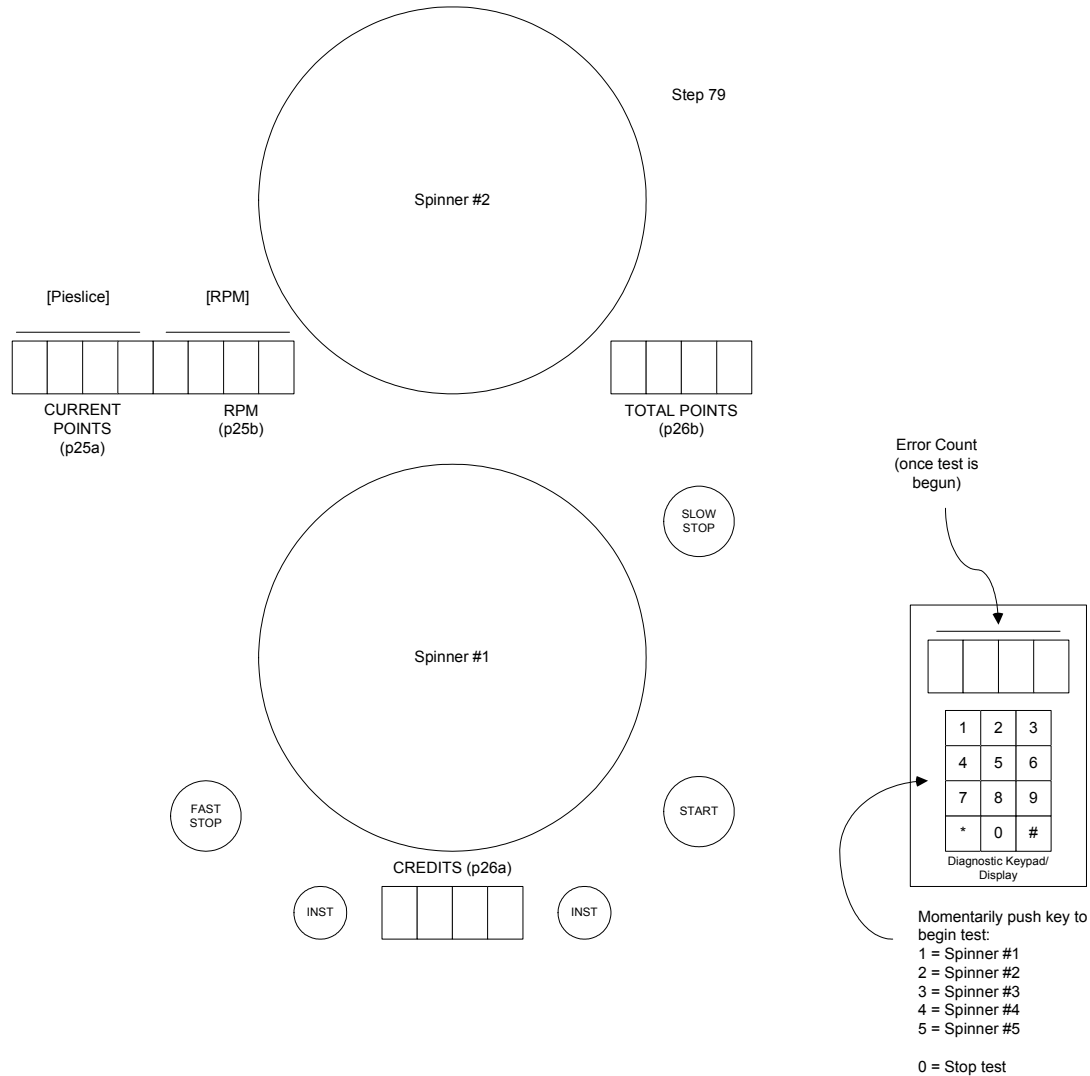

Step 79 Diagnostic Layout


Troubleshooting Steps for Diagnostic 79

Problem	Solution
Spinner errors detected (a couple errors during a couple minutes of operation is normal and will not cause problems in game's operation)	<ul style="list-style-type: none"> • Examine/reseat wiring harness connections to spinner boards • Replace spinner board and retest • Replace spinner mechanism and retest

Viewing Steps 80 - 87

VIEWING ADDITIONAL STATISTICAL INFORMATION'S STEPS 80 - 87

Step's 80 – 87 The RPM display will give the Value or Data associated with the step, and the Total Points Display gives the Spinner Number. Pressing the “SLOW STOP” Button will cycle through and select all of the Spinners.

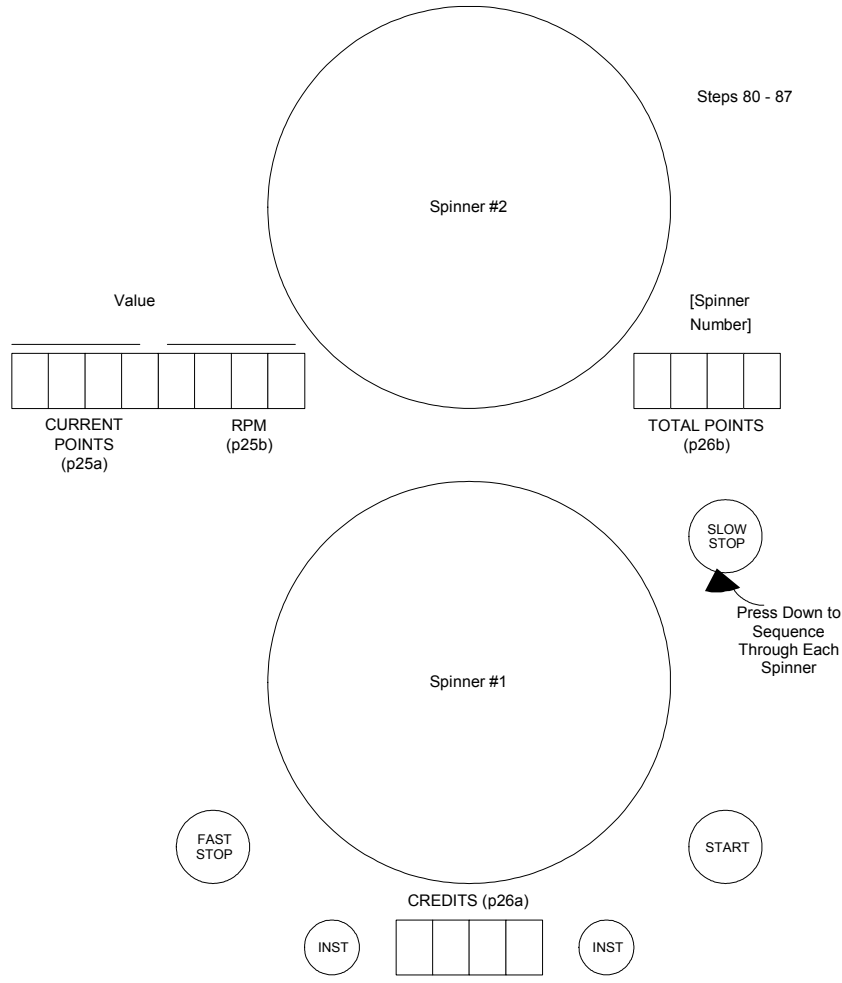

Statistical Information Steps 80 - 87


Step #	Value Range	Description
80	0-00,999,999	Number of Times Player Paid To Go Higher from Spinner #1-5 (Since Last Reset)
81	0-00,999,999	Number of Times Player Paid To Go Higher from Spinner #1-5 (Lifetime)
82	0-00,999,999	Number of Times Player Did Not Pay To Go Higher from Spinner #1-5 (Since Last Reset)
83	0-00,999,999	Number of Times Player Did Not Pay To Go Higher from Spinner #1-5 (Lifetime)
84	0-00,999,999	Number of Times Player Landed on Secret Passage from Spinner #1-5 (Since Last Reset)
85	0-00,999,999	Number of Times Player Landed on Secret Passage from Spinner #1-5 (Lifetime)
86	0-00,999,999	Number of Times Player Landed on Booby Trap from Spinner #1-5 (Since Last Reset)
87	0-00,999,999	Number of Times Player Landed on Booby Trap from Spinner #1-5 (Lifetime)

Viewing Steps 99

Software Version Identification

STEP 99 VIEWING SOFTWARE VERSION


Step 99 Displays the Eight Digit Software Identification Number on the Last Value Scored & RPM's displays.

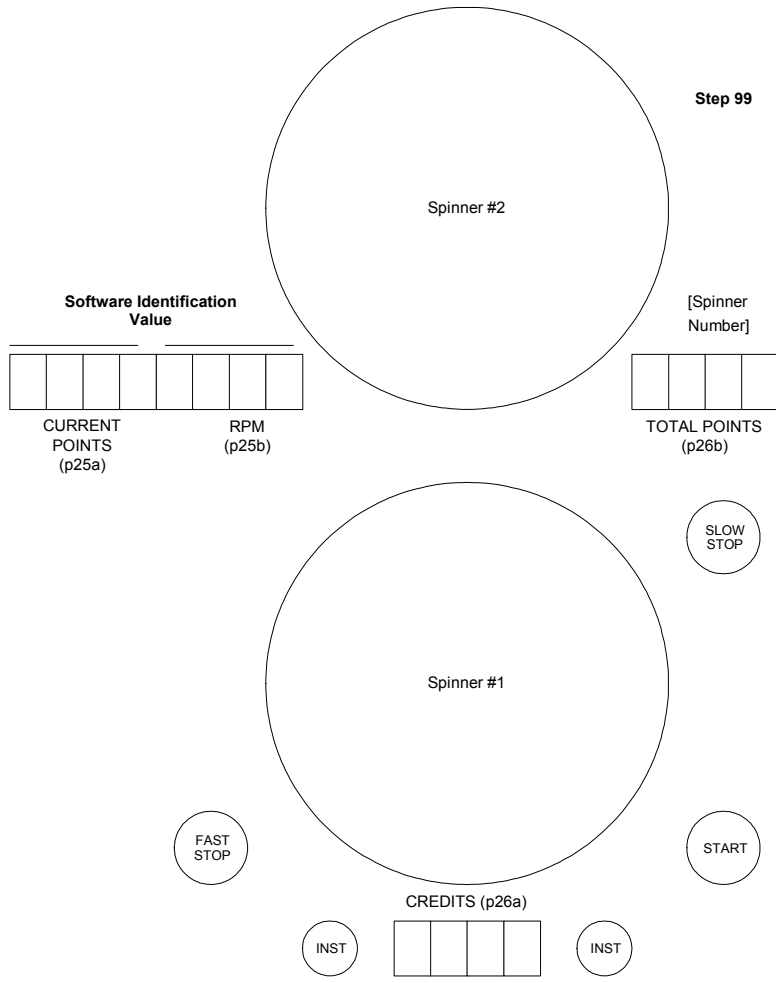

View and Changing Spinner Target Values

VIEWING AND CHANGING SPINNER TARGET VALUES STEPS 100 – 576

Pressing the **FAST STOP BUTTON** will decrement the Value, Pressing the **START BUTTON** will increment the value. To increase the **STEP NUMBER** use the Numeric Keypad and press the ‘*’, to decrease the **STEP NUMBER** press the ‘#’ symbol. To Go to **STEPS** directly Hold down the “*” key while entering the **STEP NUMBER** in the keypad. Pressing the *Program Mode* or Holding Down both the ‘*’ and “#” symbols will allow the operator to exit. The program button is located near the main board inside of the cabinet.

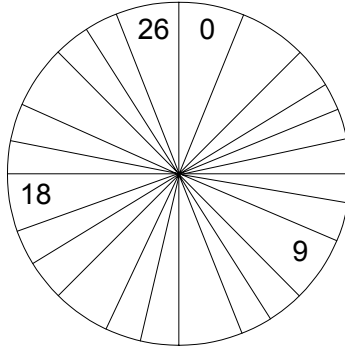


STEPS 100 - 126

VIEWING SPINNER #1 TARGET POINTS

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
100	0	INCREMENTS OF 1
101	1	“
102	2	“
103	3	“
104	4	“
105	5	“
106	6	“
107	7	“
108	8	“
109	9	“
110	10	“
111	11	“
112	12	“
113	13	“
114	14	“
115	15	“
116	16	“
117	17	“
118	18	“
119	19	“

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
120	20	“
121	21	“
122	22	“
123	23	“
124	24	“
125	25	“
126	26	“


View and Changing Spinner Target Values

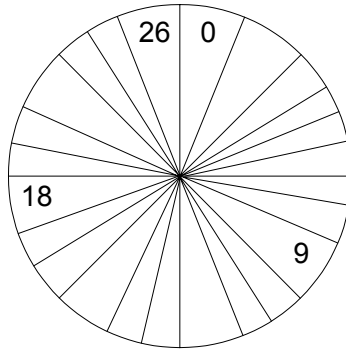

STEPS 150 - 176 CHANGING SPINNER #1 TARGET TYPES

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET TYPES
150	0	0=NONE 1-5 JUMP TO SPINNER# 6=UP 7 = DOWN 8= DEATH
151	1	“
152	2	“
153	3	“
154	4	“
155	5	“
156	6	“
157	7	“
158	8	“
159	9	“
160	10	“
161	11	“
162	12	“
163	13	
164	14	
165	15	
166	16	
167	17	
168	18	
169	19	
170	20	
171	21	
172	22	
173	23	
174	24	
175	25	
176	26	

View and Changing Spinner Target Values

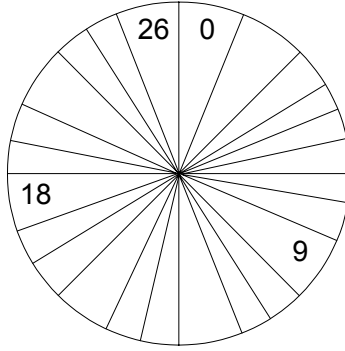


STEPS 200 - 226

VIEWING SPINNER #2 TARGET POINTS

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
200	0	INCREMENTS OF 5
201	1	“
202	2	“
203	3	“
204	4	“
205	5	“
206	6	“
207	7	“
208	8	“
209	9	“
210	10	“
211	11	“
212	12	“
213	13	“
214	14	“
215	15	“
216	16	“
217	17	“
218	18	“
219	19	“
220	20	“
221	21	“
222	22	“
223	23	“
224	24	“
225	25	“
226	26	“


View and Changing Spinner Target Values

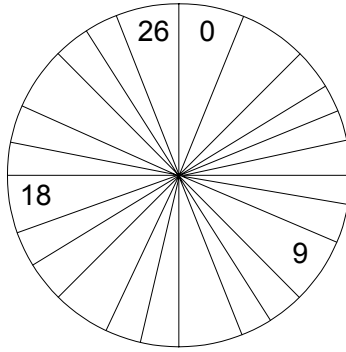

STEPS 250 - 276 CHANGING SPINNER #2 TARGET TYPES

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET TYPES
250	0	0=NONE 1-5 JUMP TO SPINNER# 6=UP 7 = DOWN 8= DEATH 9=DEAD ZONE 10= UP DEAD ZONE
251	1	“
252	2	“
253	3	“
254	4	“
255	5	“
256	6	“
257	7	“
258	8	“
259	9	“
260	10	“
261	11	“
262	12	“
263	13	“
264	14	“
265	15	“
266	16	“
267	17	“
268	18	“
269	19	“
270	20	“
271	21	“
272	22	“
273	23	“
274	24	“
275	25	“
276	26	“


View and Changing Spinner Target Values

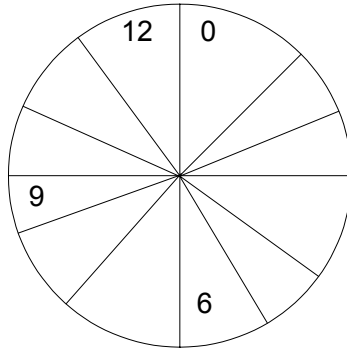

STEPS 300 - 312 CHANGING SPINNER #3 TARGET POINTS

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
300	0	INCREMENTS OF 1
301	1	“
302	2	“
303	3	“
304	4	“
305	5	“
306	6	“
307	7	“
308	8	“
309	9	“
310	10	“
311	11	“
312	12	“


View and Changing Spinner Target Values

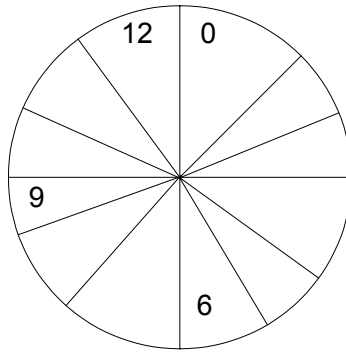

STEPS 350 - 362 CHANGING SPINNER #1 TARGET TYPES

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET TYPES
350	0	0=NONE 1-5 JUMP TO SPINNER# 6=UP 7 = DOWN 8= DEATH 9=DEAD ZONE 10= UP DEAD ZONE
351	1	“
352	2	“
353	3	“
354	4	“
355	5	“
356	6	“
357	7	“
358	8	“
359	9	“
360	10	“
361	11	“
362	12	“


View and Changing Spinner Target Values

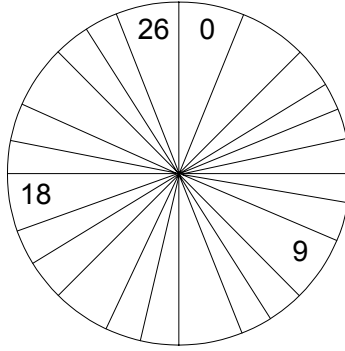

STEPS400 - 426 VIEWING SPINNER #4 TARGET POINTS

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
400	0	INCREMENTS OF 1
401	1	“
402	2	“
403	3	“
404	4	“
405	5	“
406	6	“
407	7	“
408	8	“
409	9	“
410	10	“
411	11	“
412	12	“
413	13	“
414	14	“
415	15	“
416	16	“
417	17	“
418	18	“
419	19	“
420	20	“
421	21	“
422	22	“
423	23	“
424	24	“
425	25	“
426	26	“

View and Changing Spinner Target Values

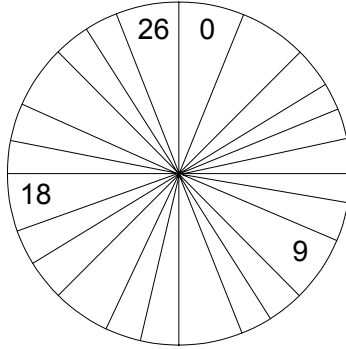


STEPS 450 - 476

CHANGING SPINNER #4 TARGET TYPES

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET TYPES
450	0	0=NONE 1-5 JUMP TO SPINNER# 6=UP 7 = DOWN 8= DEATH 9=DEAD ZONE 10= UP DEAD ZONE
451	1	“
452	2	“
453	3	“
454	4	“
455	5	“
456	6	“
457	7	“
458	8	“
459	9	“
460	10	“
461	11	“
462	12	“
463	13	“
464	14	“
465	15	“
466	16	“
467	17	“
468	18	“
469	19	“
470	20	“
471	21	“
472	22	“
473	23	“
474	24	“
475	25	“
476	26	“


View and Changing Spinner Target Values

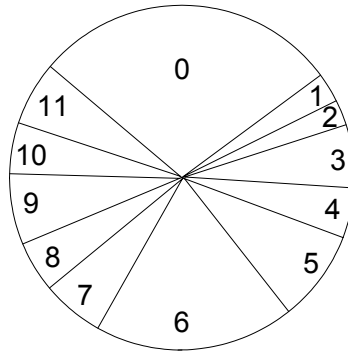

STEPS 500 - 526

VIEWING SPINNER #4 TARGET POINTS

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET POINTS
500	0	INCREMENTS OF 1
501	1	“
502	2	“
503	3	“
504	4	“
505	5	“
506	6	“
507	7	“
508	8	“
509	9	“
510	10	“
511	11	“
512	12	“
513	13	“
514	14	“
515	15	“
516	16	“
517	17	“
518	18	“
519	19	“
520	20	“
521	21	“
522	22	“
523	23	“
524	24	“
525	25	“
526	26	“

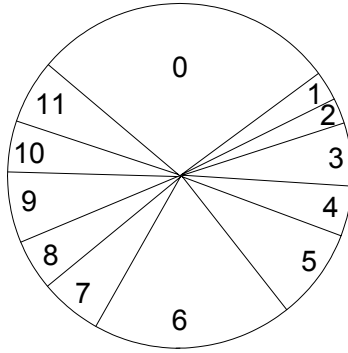

STEPS 550 - 576
CHANGING SPINNER #5 TARGET TYPES

STEP NUMBER SPINNER #1	SPINNER POSITION	TARGET TYPES
550	0	0=NONE 1-5 JUMP TO SPINNER# 6=UP 7 = DOWN 8= DEATH 9=DEAD ZONE 10= UP DEAD ZONE
551	1	“
552	2	“
553	3	“
554	4	“
555	5	“
556	6	“
557	7	“
558	8	“
559	9	“
560	10	“
561	11	“
562	12	“
563	13	“
564	14	“
565	15	“
566	16	“
567	17	“
568	18	“
569	19	“
570	20	“
571	21	“
572	22	“
573	23	“
574	24	“
575	25	“
576	26	“

Wiring Diagrams

Top Level Interconnections

TOP LEVEL INTERCONNECT DIAGRAM

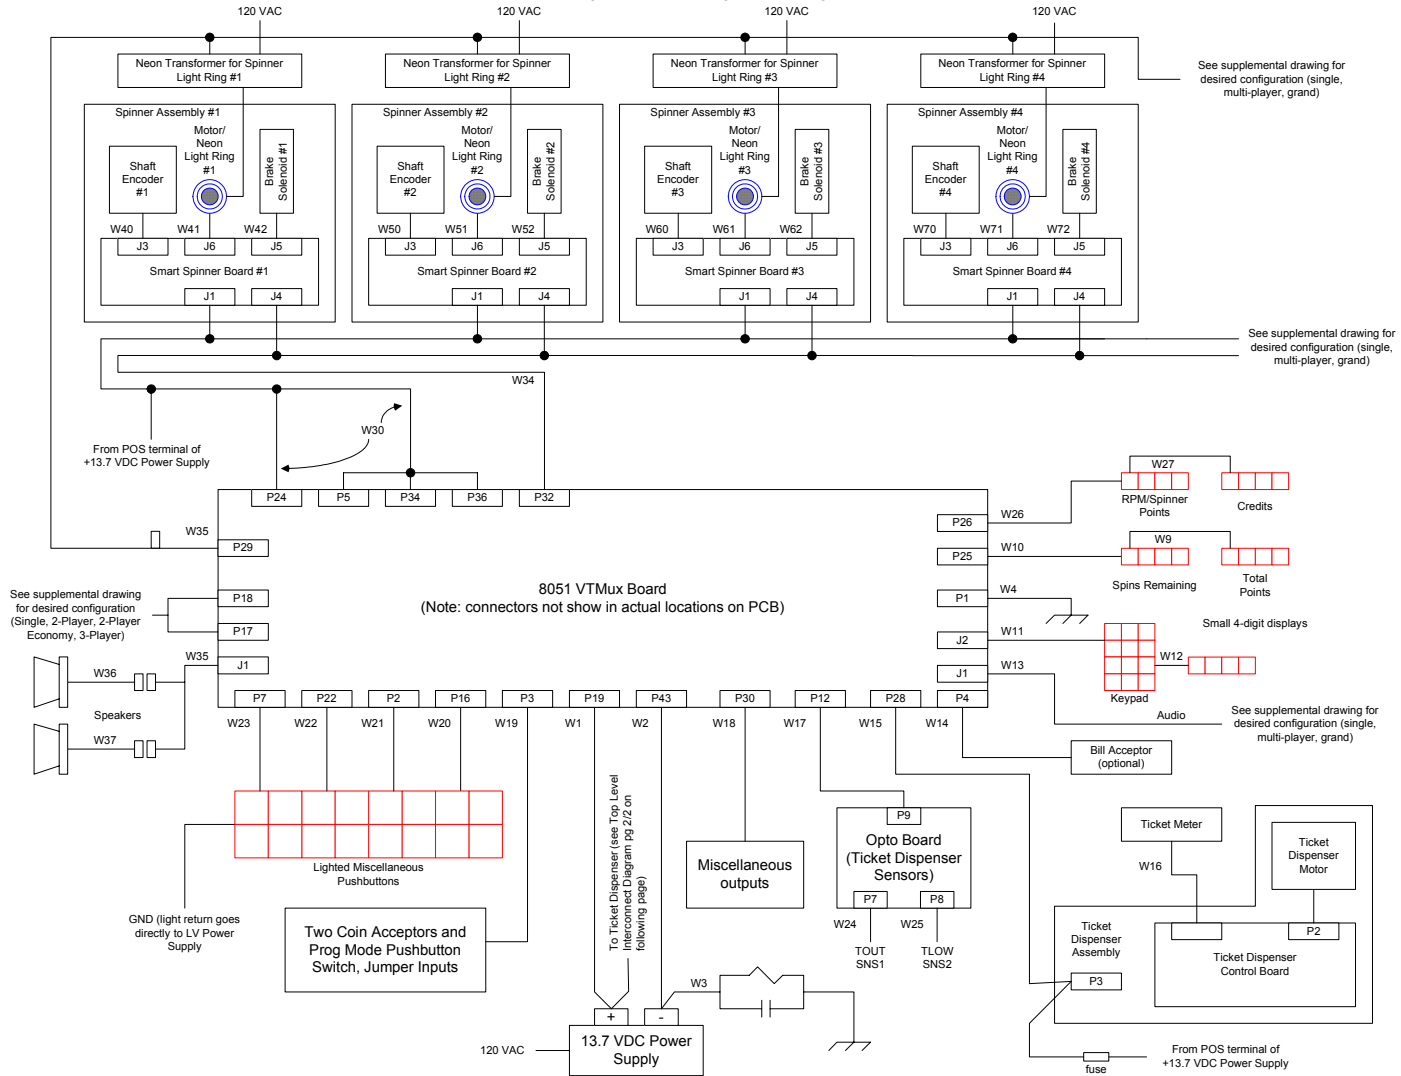


FIGURE 1 – TOP LEVEL INTERCONNECT DIAGRAM 1 OF 2

Wiring Diagrams

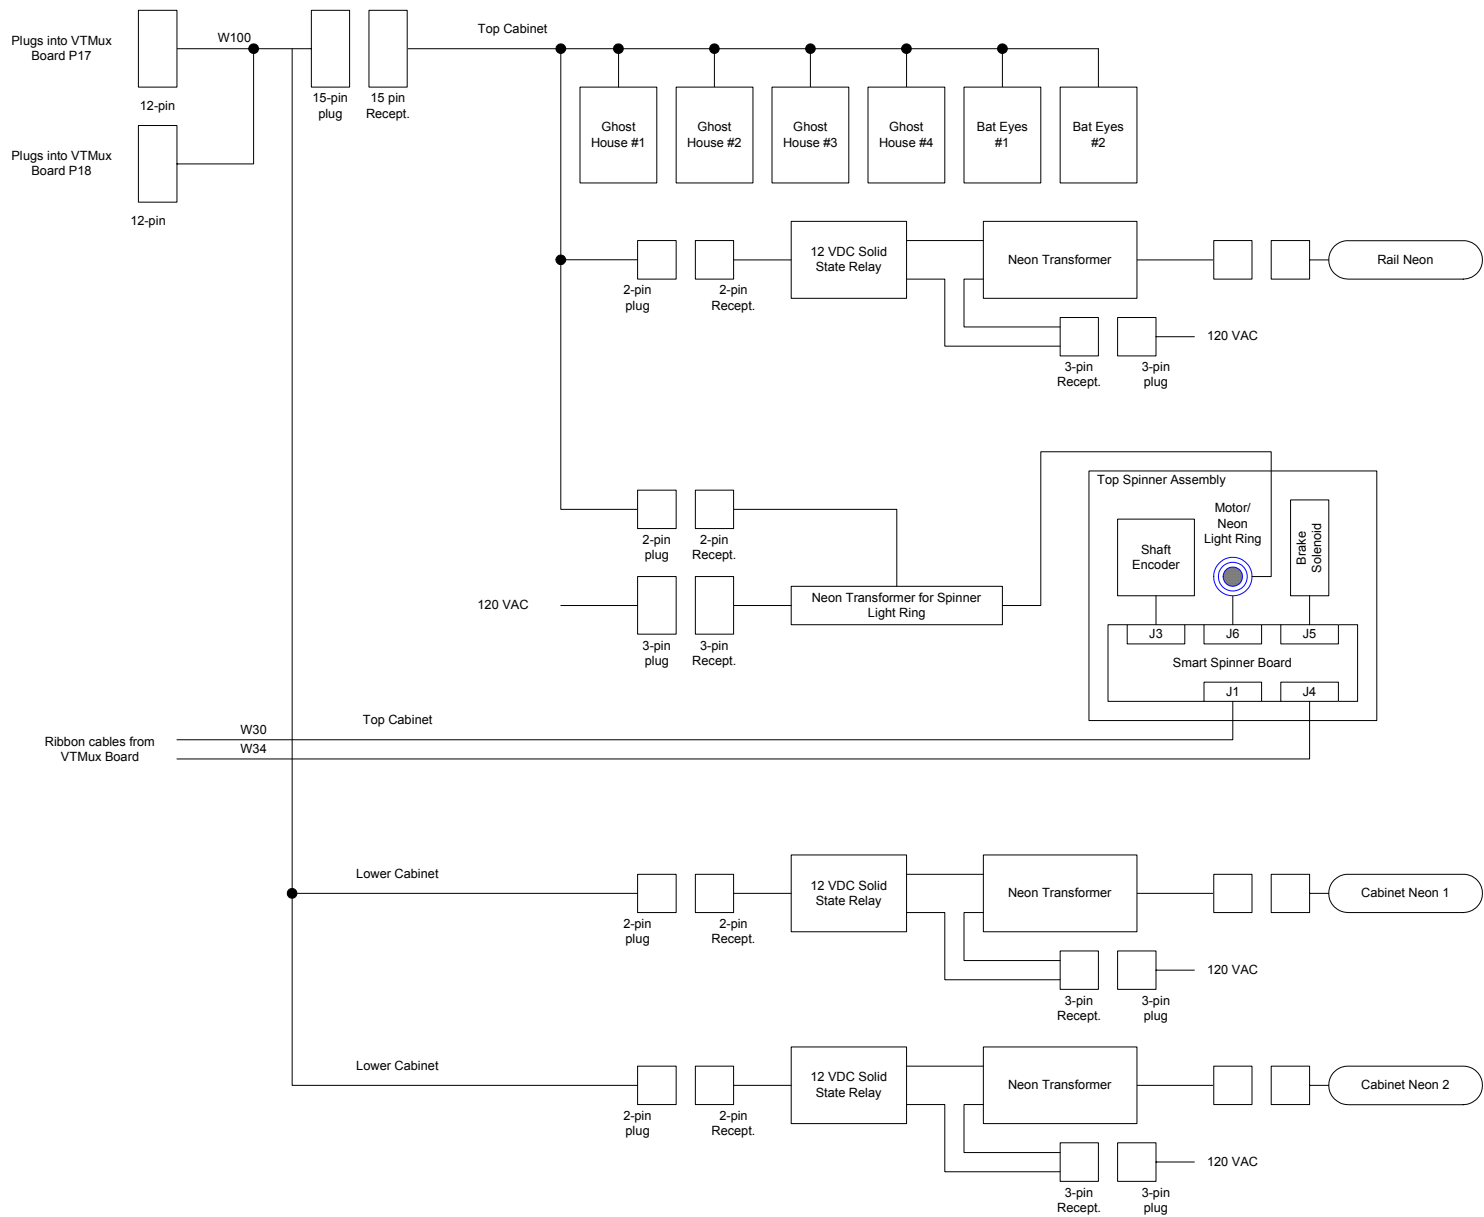


FIGURE 2 - TOP LEVEL INTERCONNECT DIAGRAM 2 OF 2

Wiring Diagrams

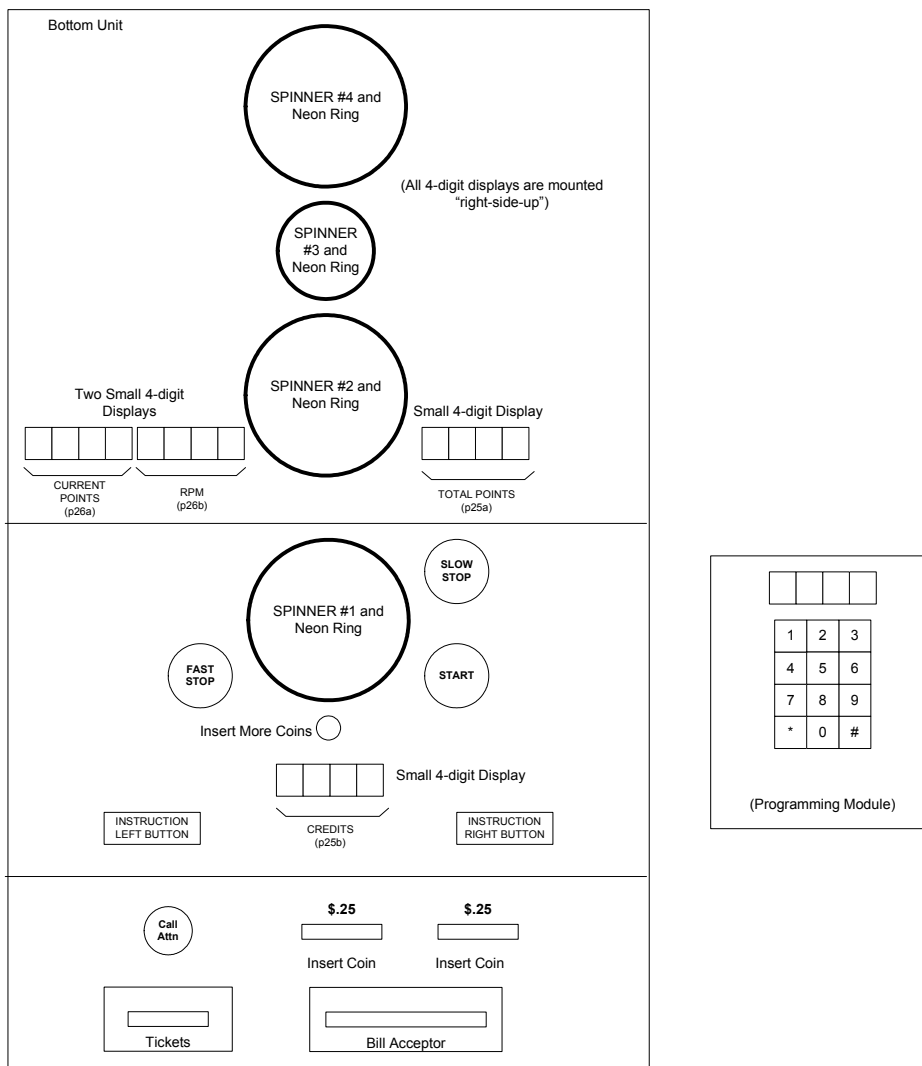


FIGURE 3 - CONTROL PANEL

Wiring Diagrams

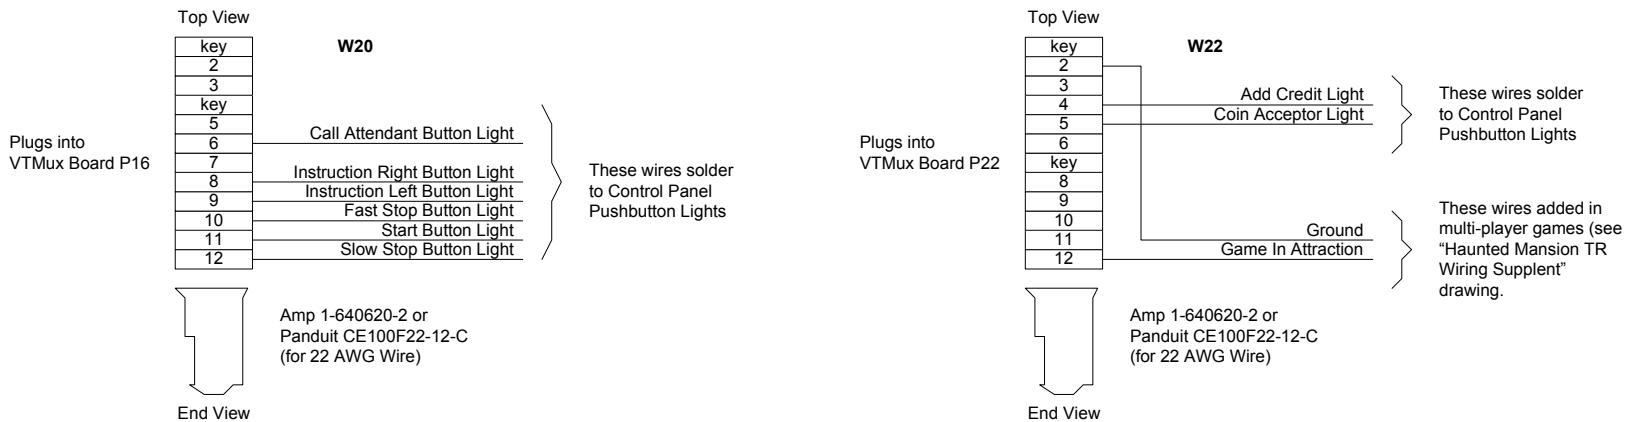


FIGURE 4 P16 & P22 CONNECTIONS FROM THE VTMUX BOARD TO THE CONTROL PANEL

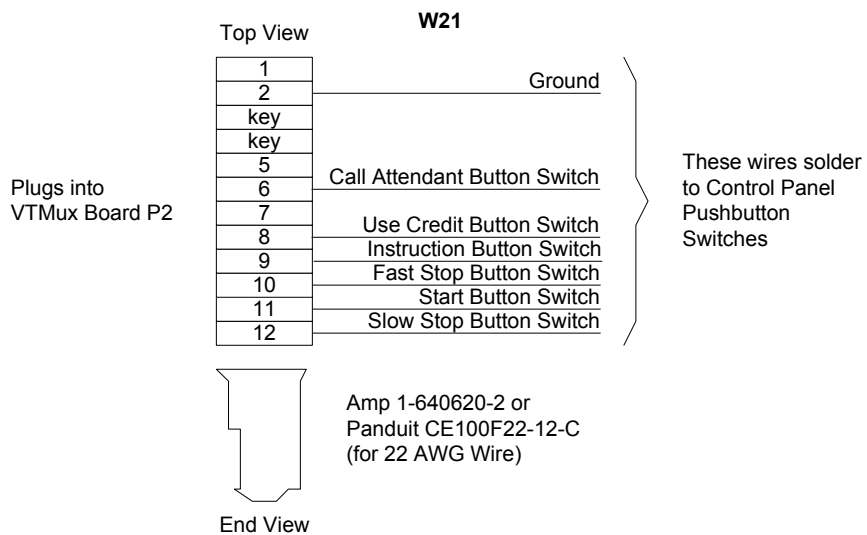


FIGURE 5 P2 CONNECTIONS FROM THE VTMUX BOARD TO THE CONTROL PANEL

Wiring Diagrams

See supplemental drawing for desired configuration (single, multi-player, grand)

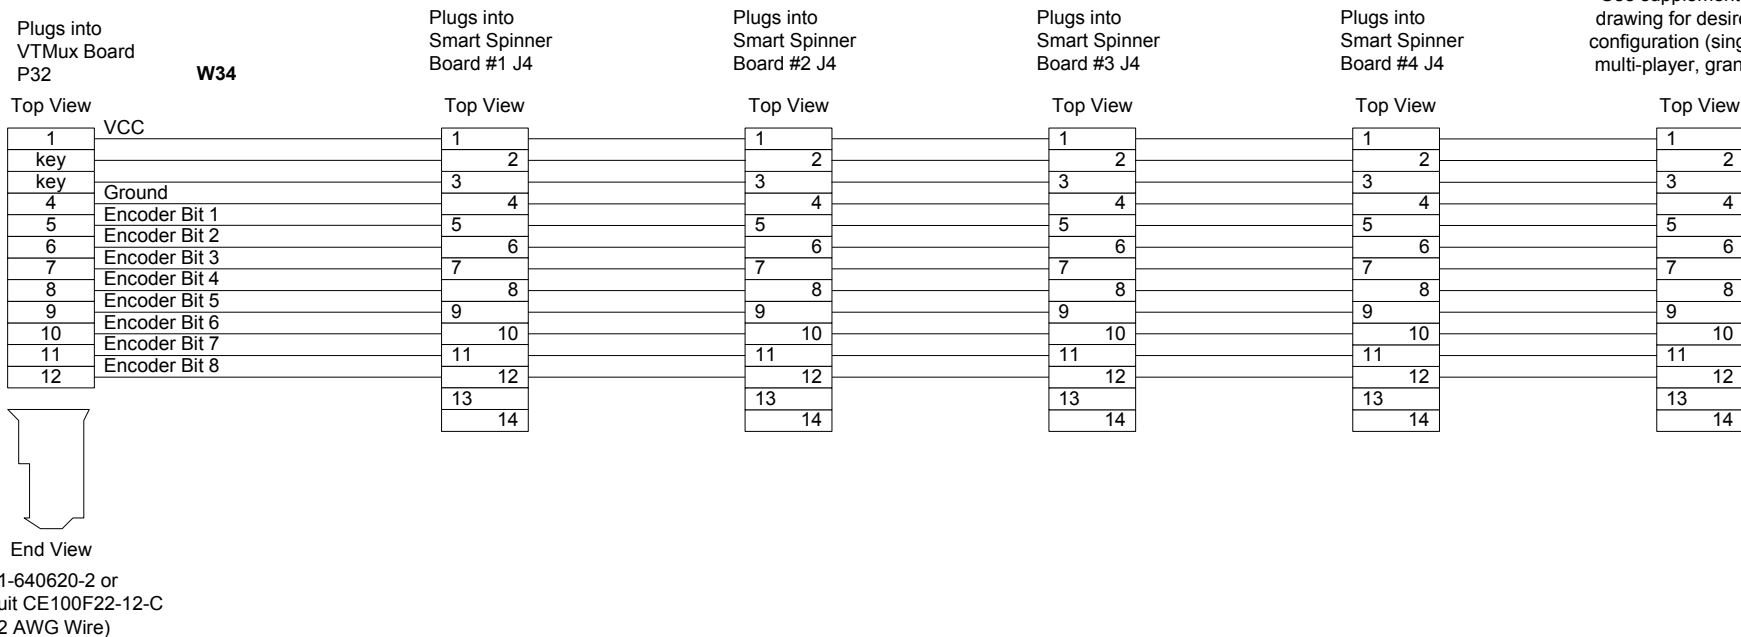


FIGURE 6 VTMUX BOARD P32 TO SMART SPINNER BOARD #1,2,3,4 J4s W34

Wiring Diagrams

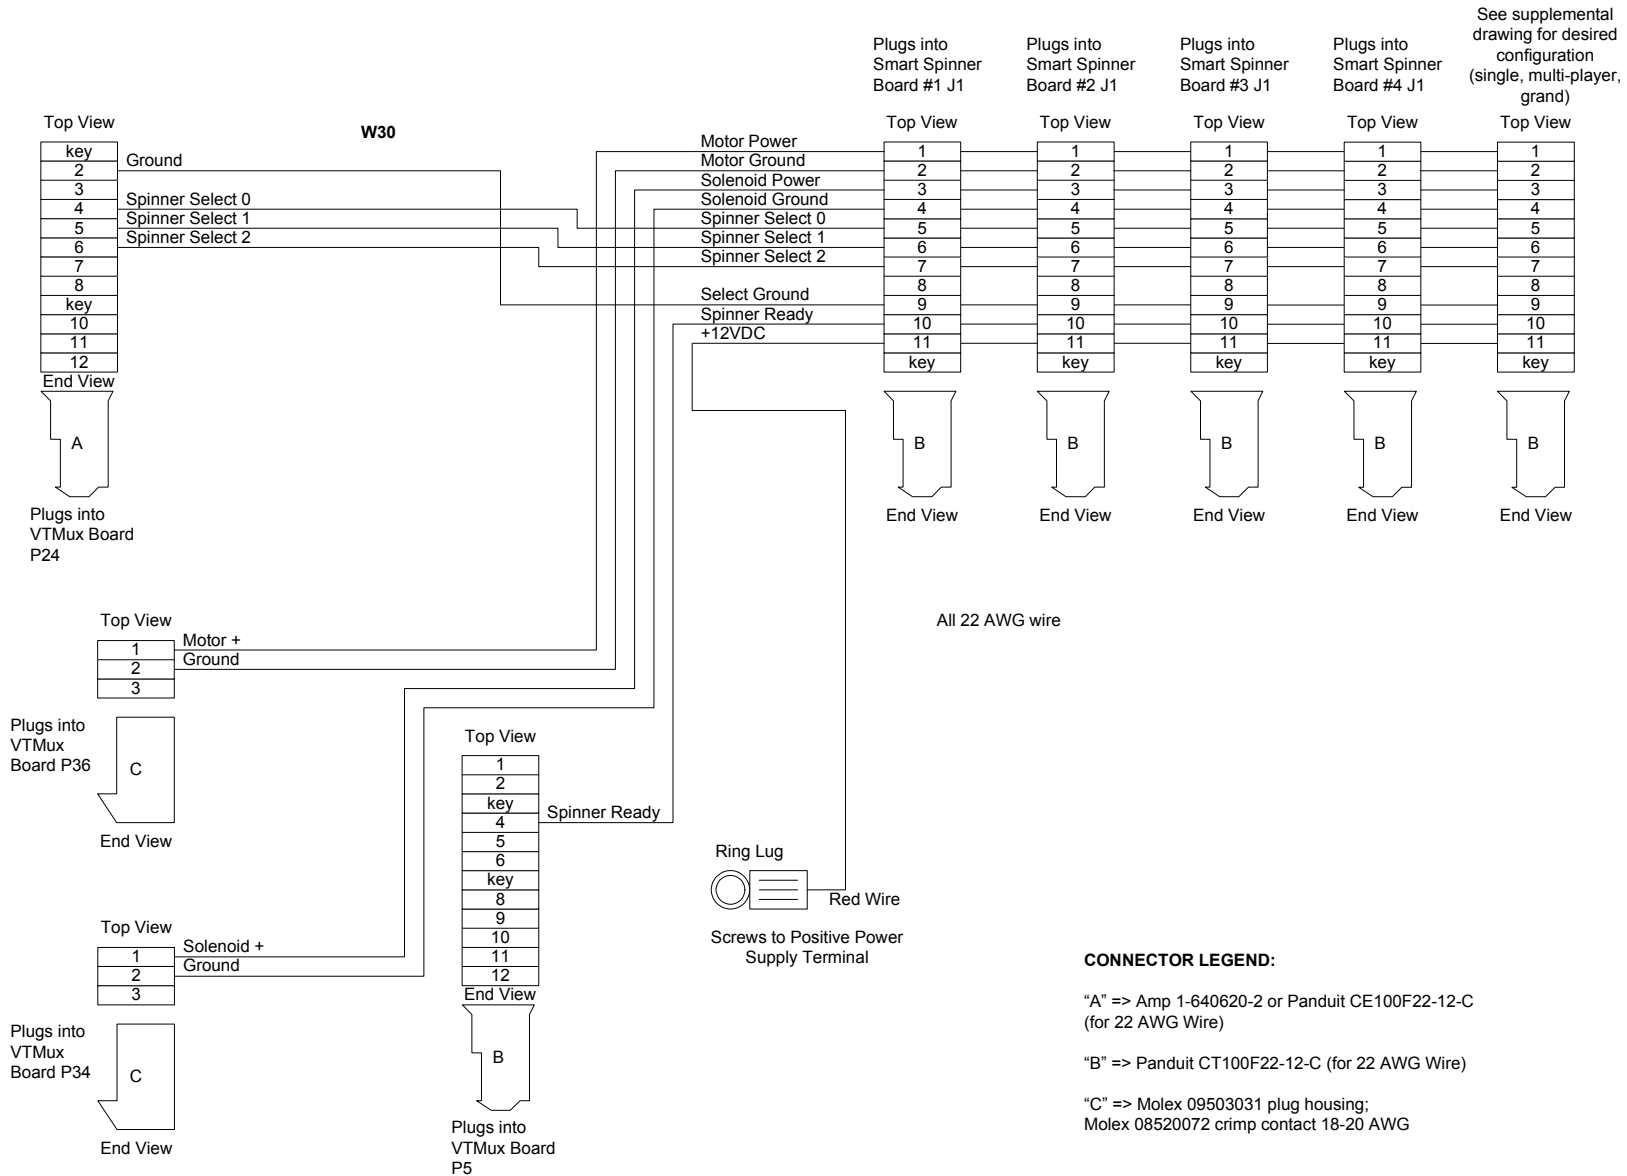


FIGURE 7 POWER SUPPLY TO SPINNER BOARDS #1-5 J1s7
W30 VTMUX BOARD P5, 24, 34, 36, AND 13.7VDC

Wiring Diagrams

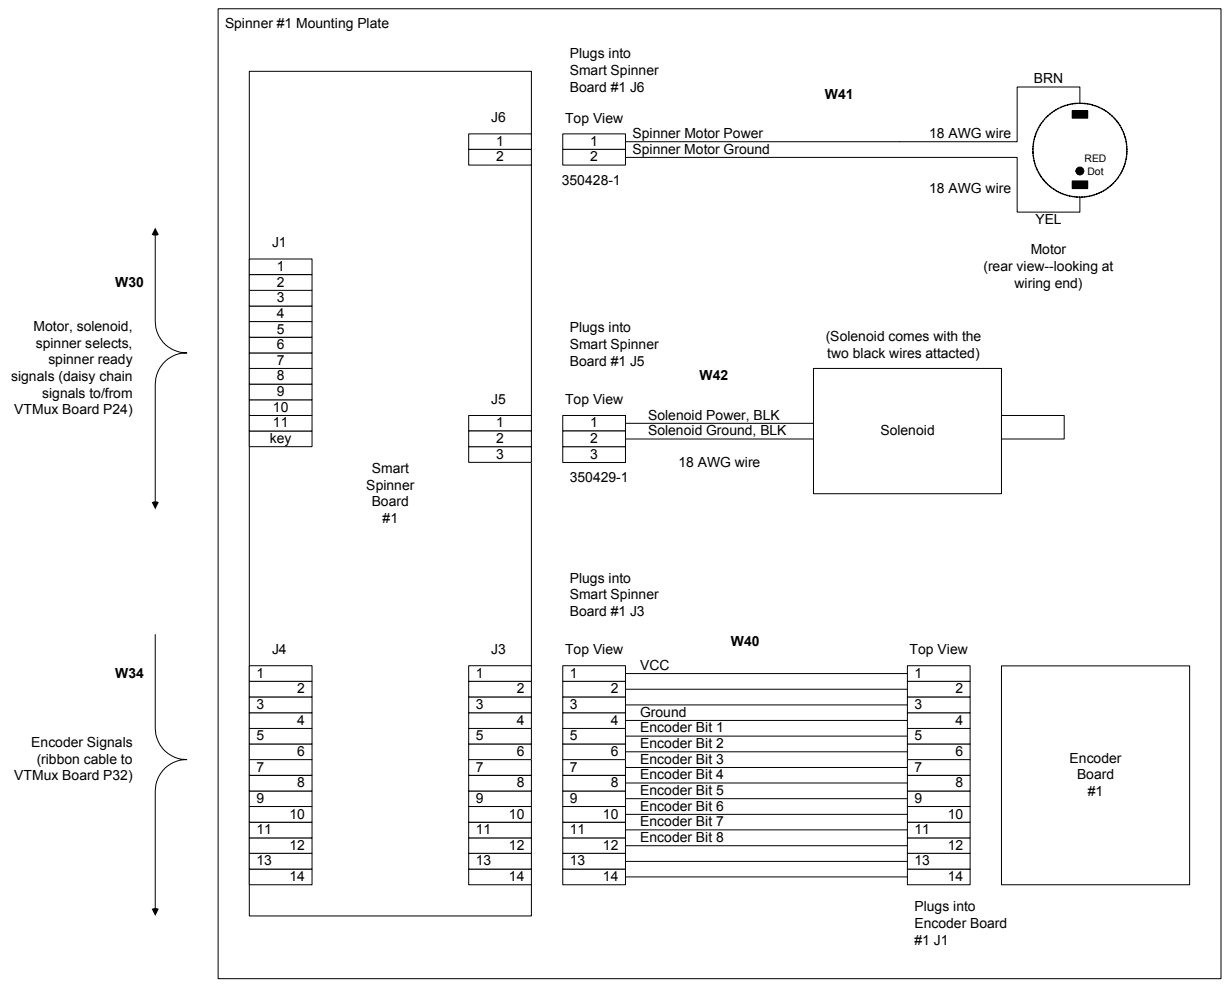


FIGURE 8 SPINNER #1 SUBASSEMBLY
W40 SPINNER BOARD #1 J3 TO ENCODER BOARD #1 J1
W41 SPINNER BOARD #1 J6 TO SPINNER MOTOR
W42 SPINNER BOARD #1 J5 TO SPINNER SOLENOID

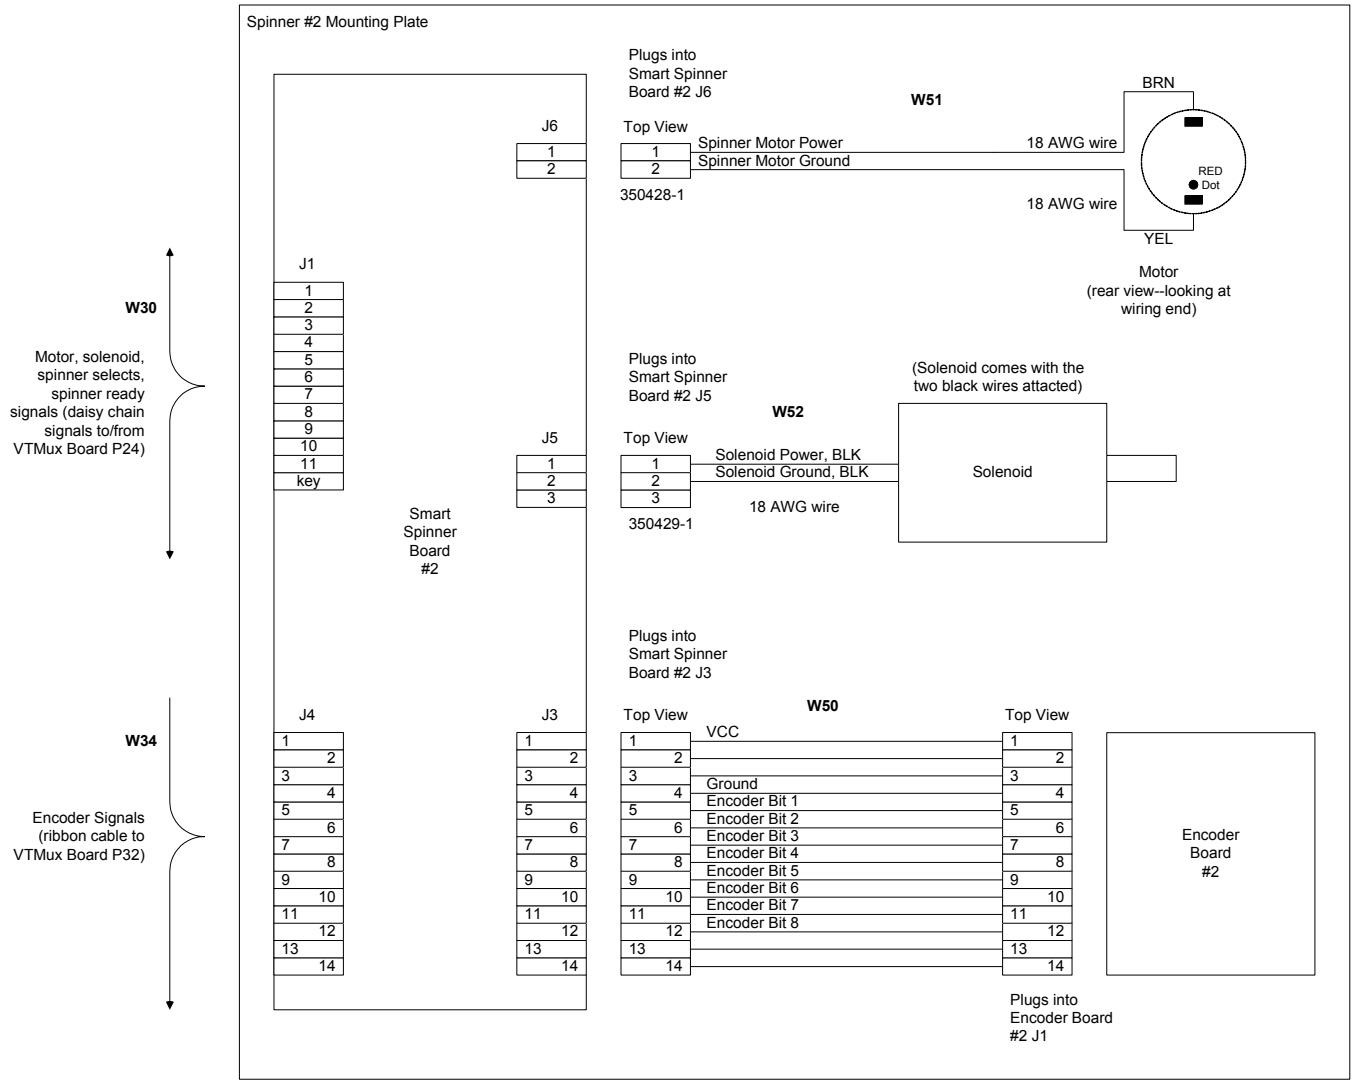


FIGURE 9 SPINNER #2 SUBASSEMBLY
W40 SPINNER BOARD #2 J3 TO ENCODER BOARD #2 J1
W41 SPINNER BOARD #2 J6 TO SPINNER MOTOR
W42 SPINNER BOARD #2 J5 TO SPINNER SOLENOID

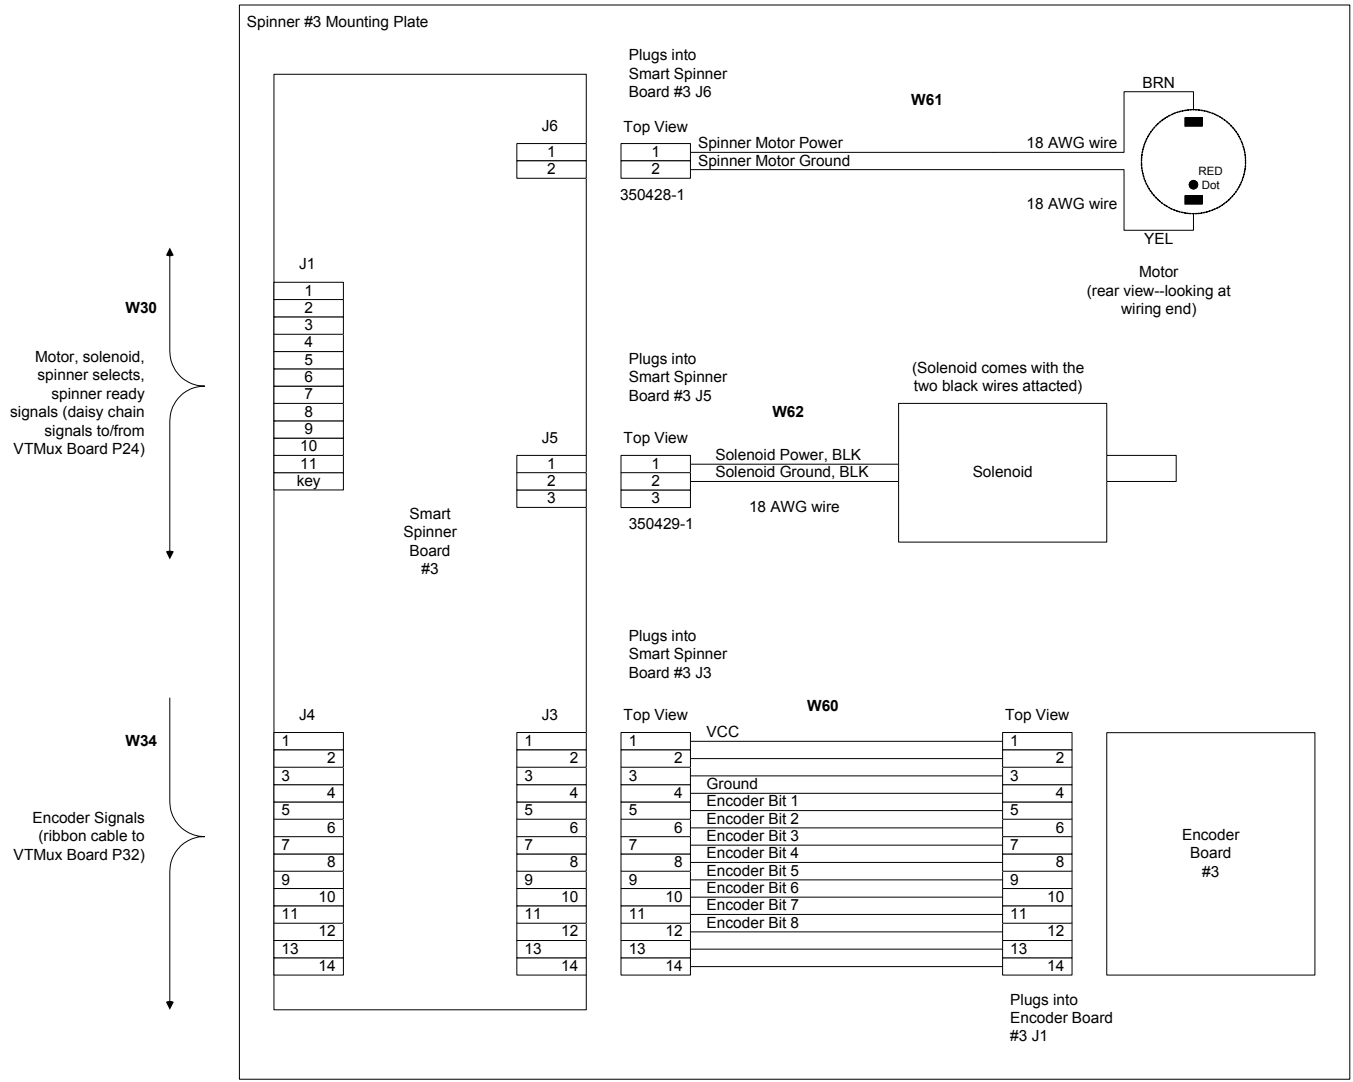


FIGURE 10 SPINNER #3 SUBASSEMBLY
W40 SPINNER BOARD #3 J3 TO ENCODER BOARD #3 J1
W41 SPINNER BOARD #3 J6 TO SPINNER MOTOR
W42 SPINNER BOARD #3 J5 TO SPINNER SOLENOID

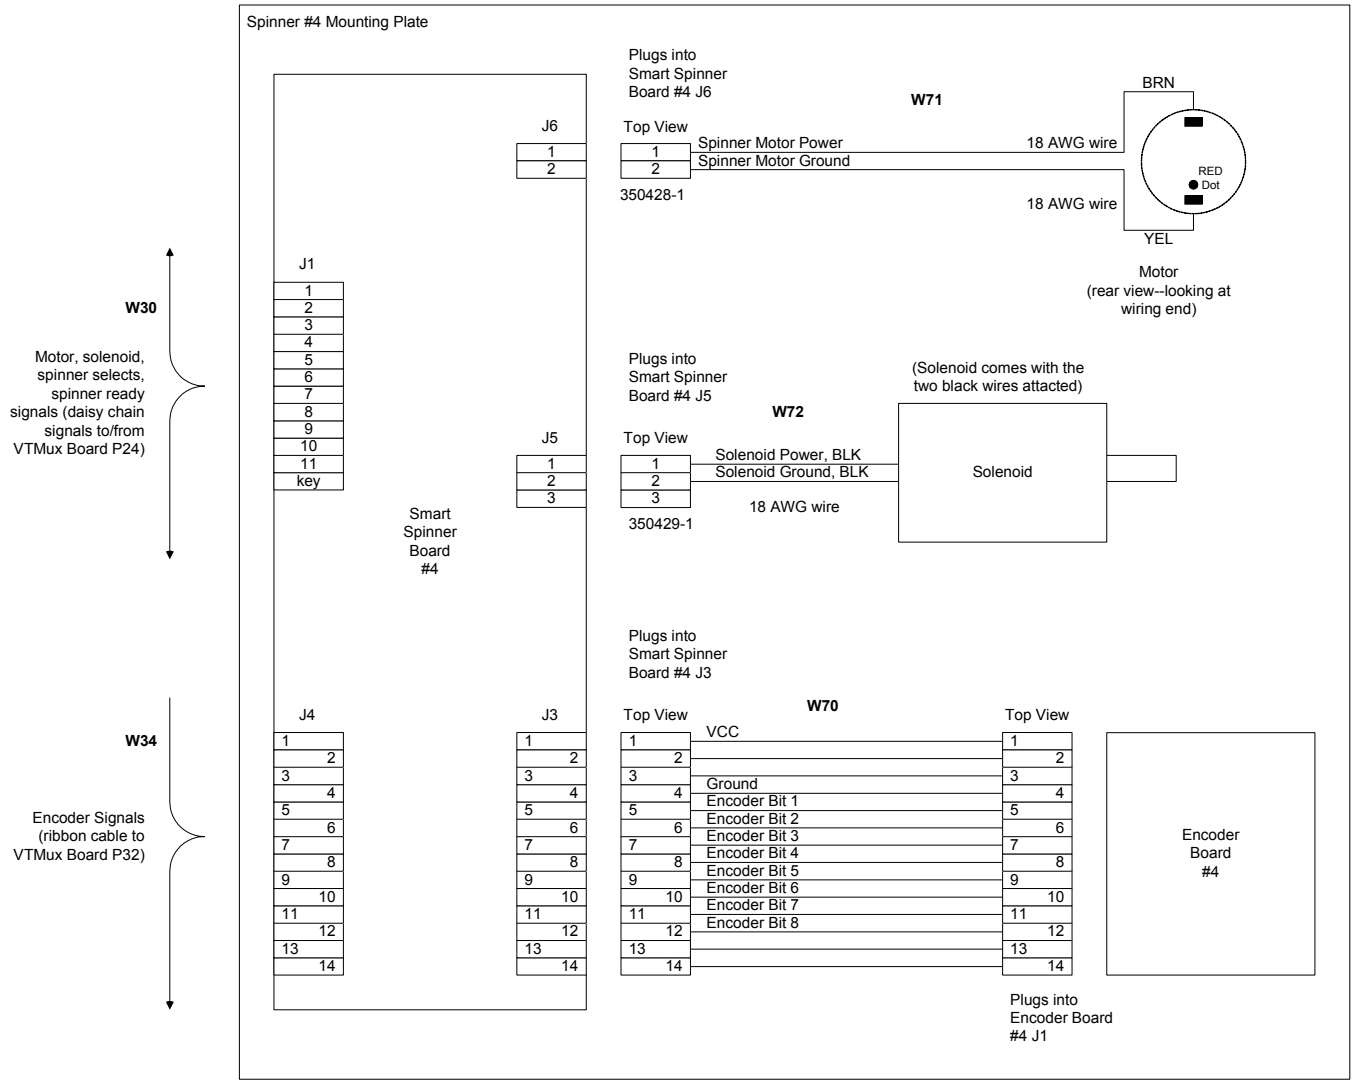


FIGURE 11 SPINNER #4 SUBASSEMBLY
W40 SPINNER BOARD #4 J3 TO ENCODER BOARD #4 J1
W41 SPINNER BOARD #4 J6 TO SPINNER MOTOR
W42 SPINNER BOARD #4 J5 TO SPINNER SOLENOID

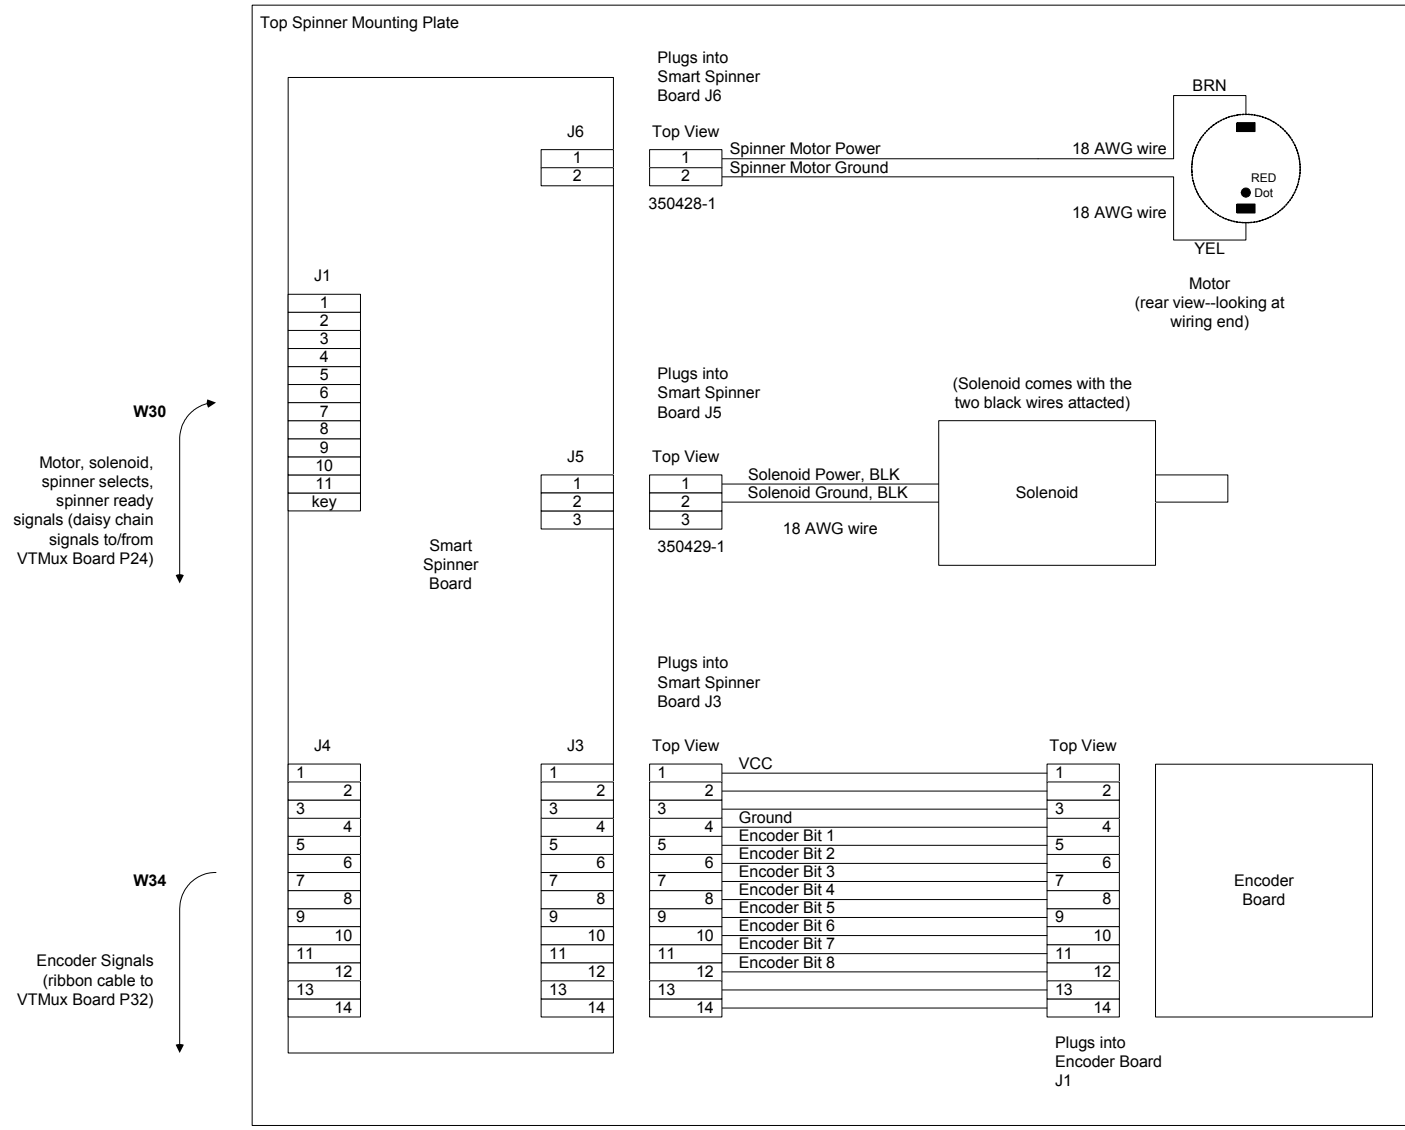
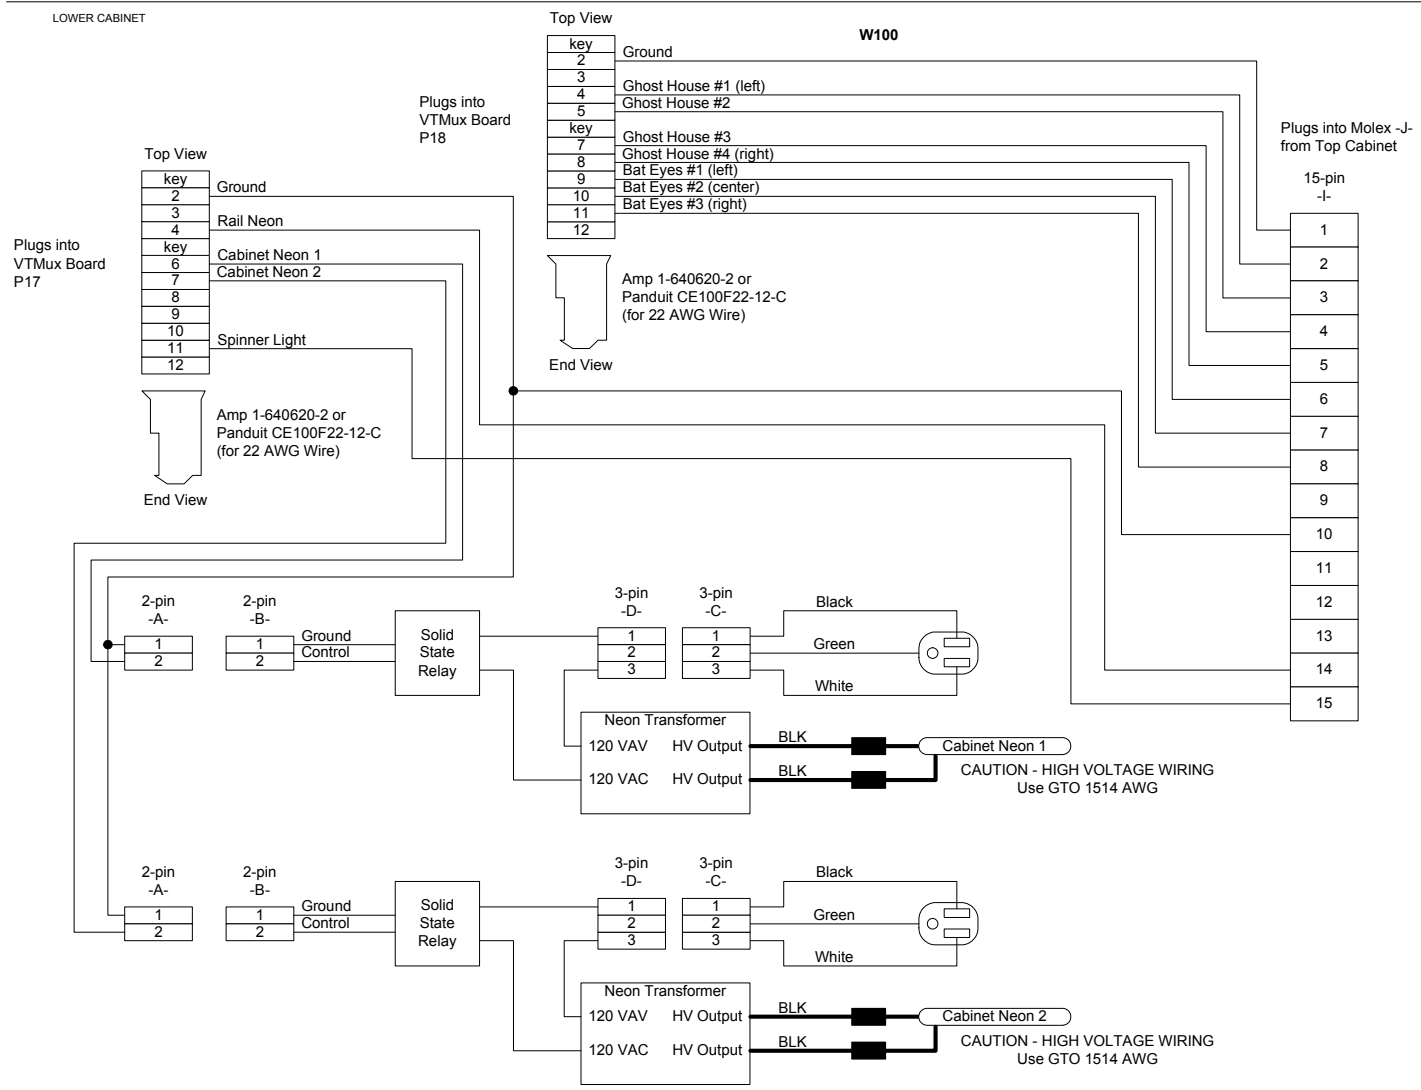


FIGURE 12 SPINNER #5 SUBASSEMBLY (OPTIONAL)


W40 SPINNER BOARD #5 J3 TO ENCODER BOARD #4 J1

W41 SPINNER BOARD #5 J6 TO SPINNER MOTOR

W42 Spinner Board #5 J5 to Spinner Solenoid



**FIGURE 13 CLOCK TOWER FEMALE CONNECTION (OPTIONAL)
W31 VTMUX BOARD P17, 18**

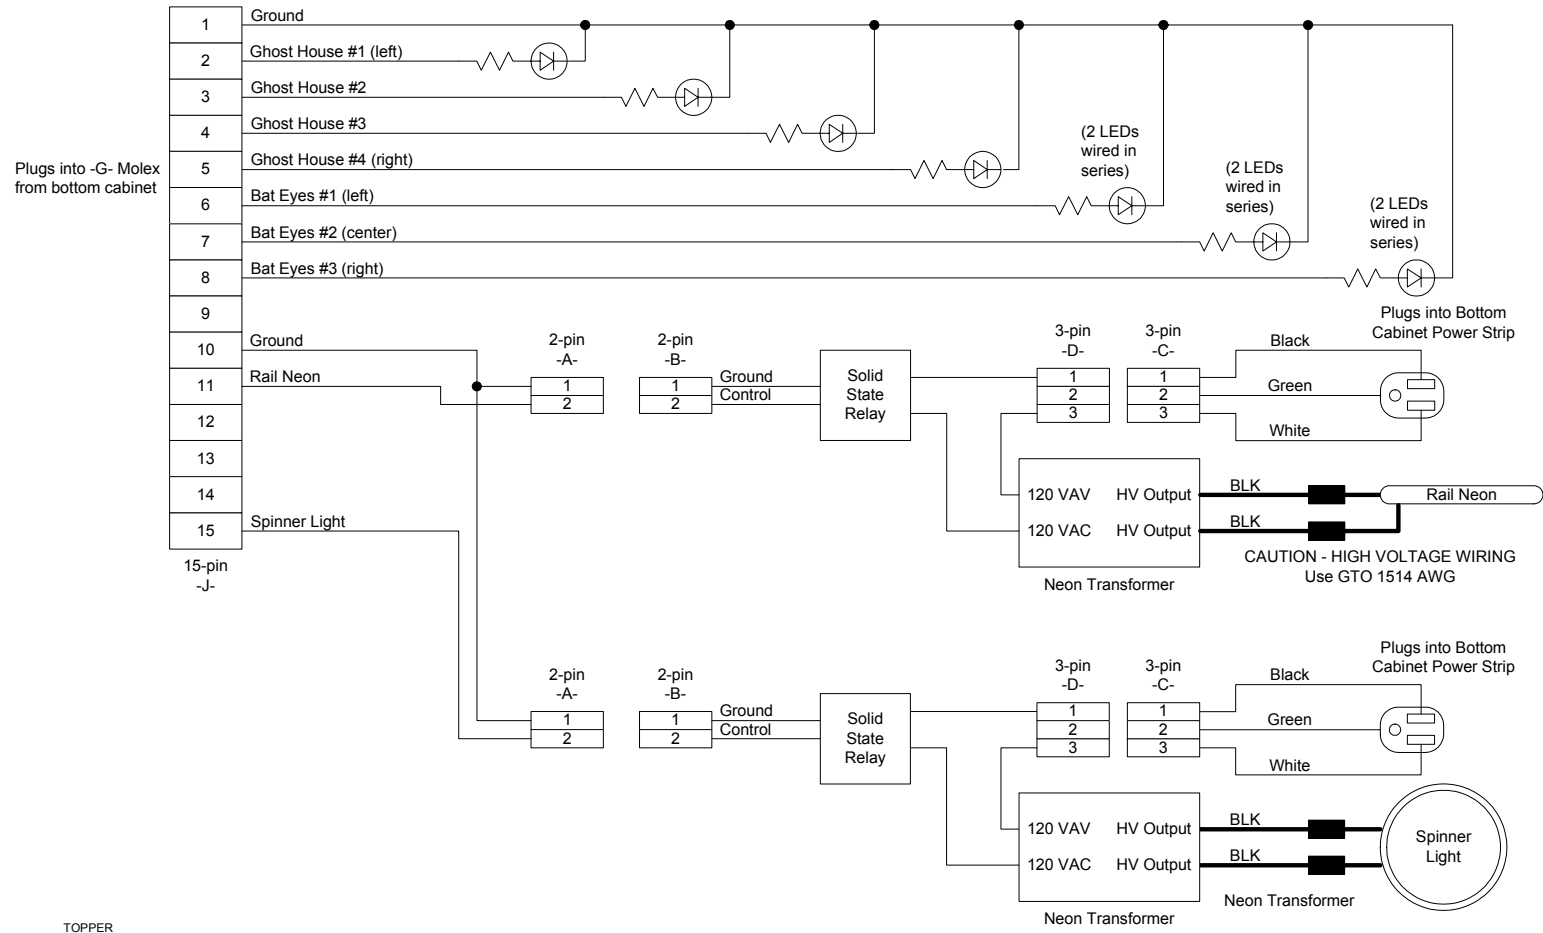

TOPPER

FIGURE 14 CLOCK TOWER MALE WIRING (OPTIONAL)
W85 CLOCK TOWER INTERFACE MALE CONNECTOR
W86 NEON RING
W87 SHAKER MOTOR
W88 SPINNER NEON RING

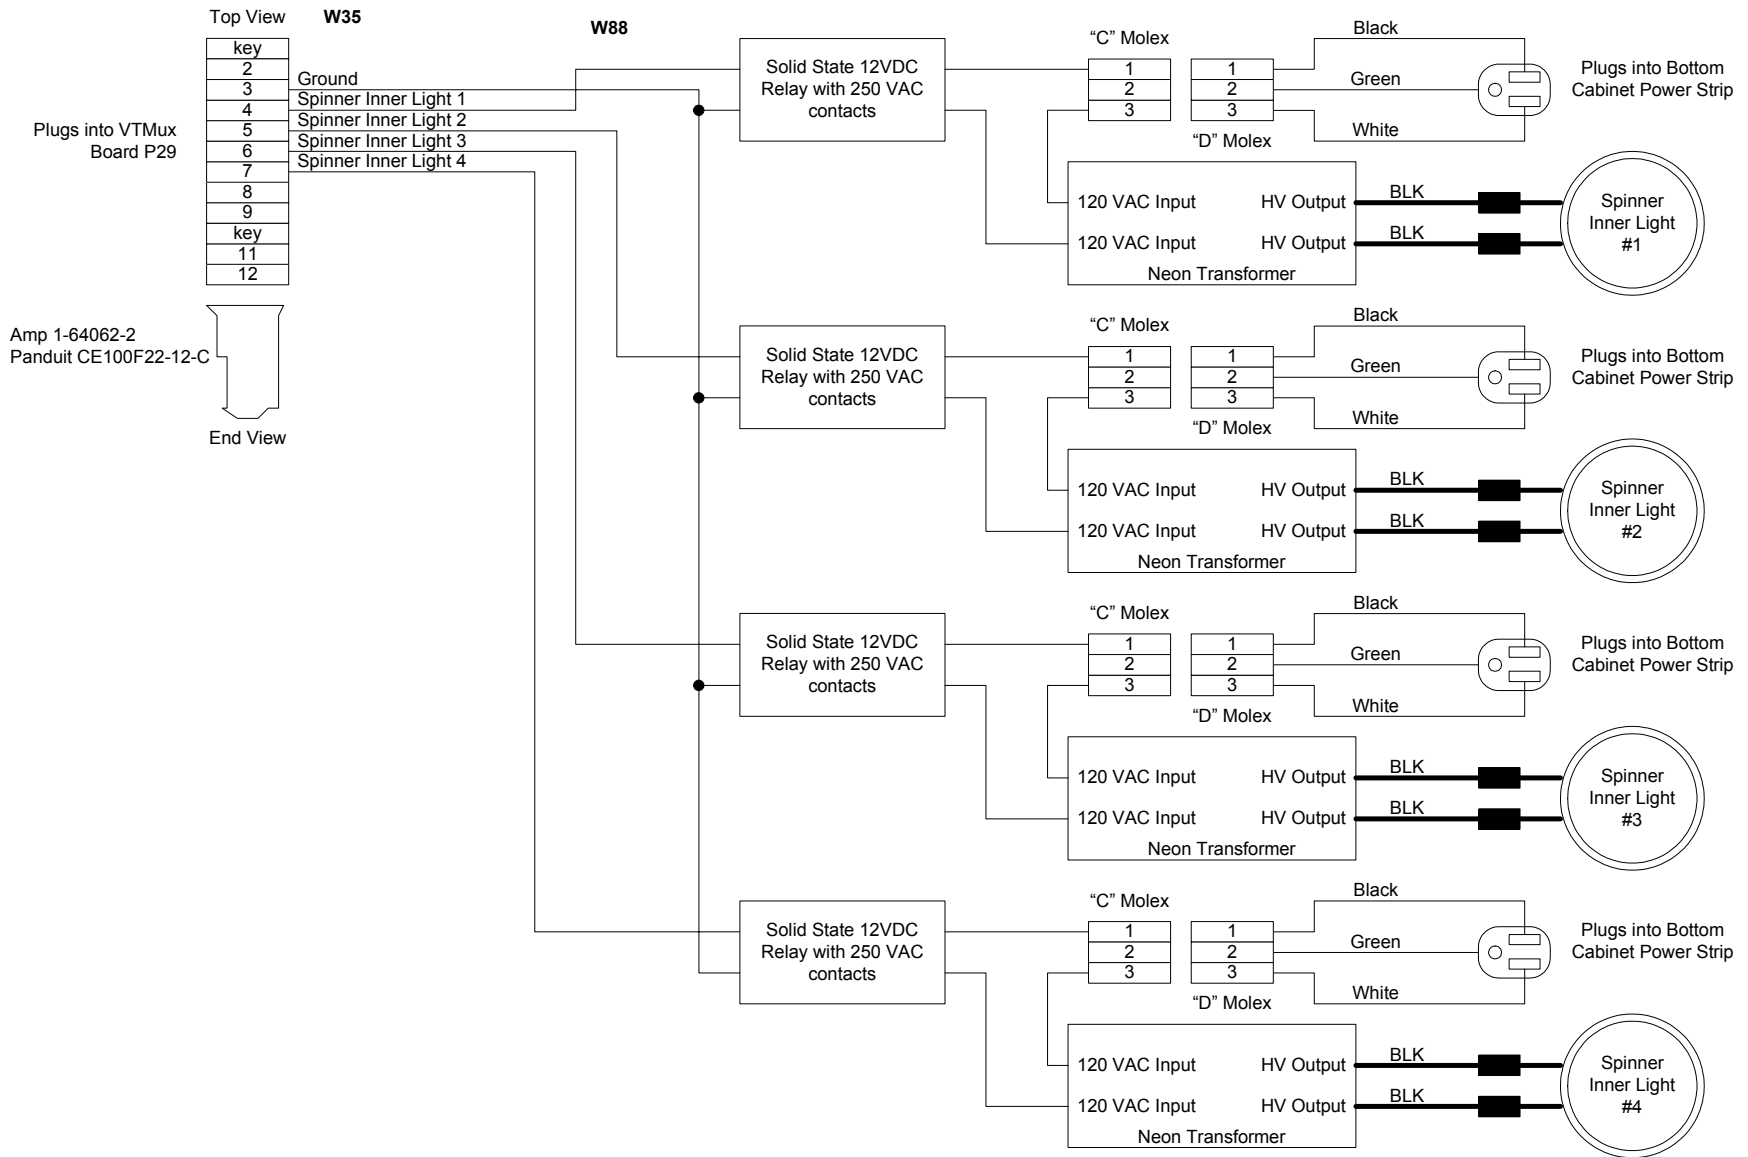


FIGURE 15 SPINNER'S 1 – 4 NEON RINGS WIRING
W35 VTMUX BOARD P29 TO SPINNER #1-5 NEON TRANSFORMERS AND LIGHTS


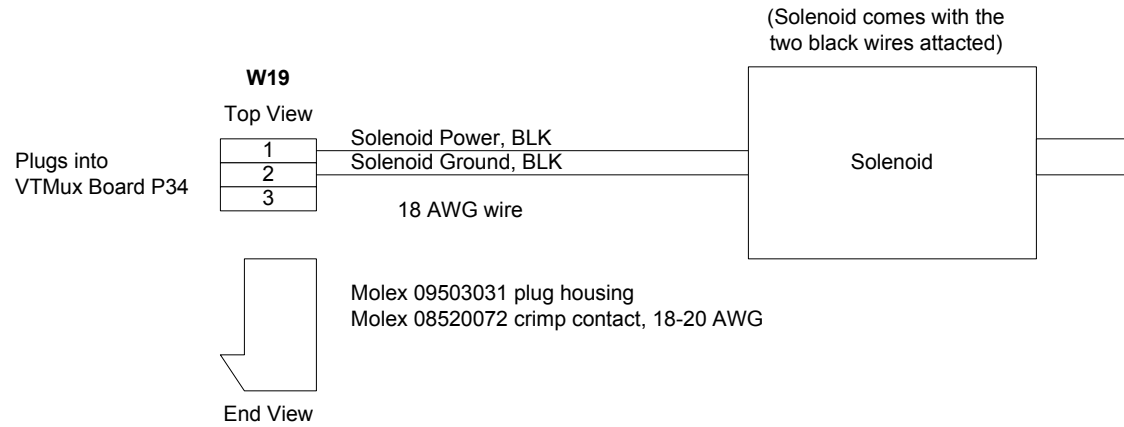


FIGURE 16 VTMUX BOARD P34 TO BRAKE SOLENOID

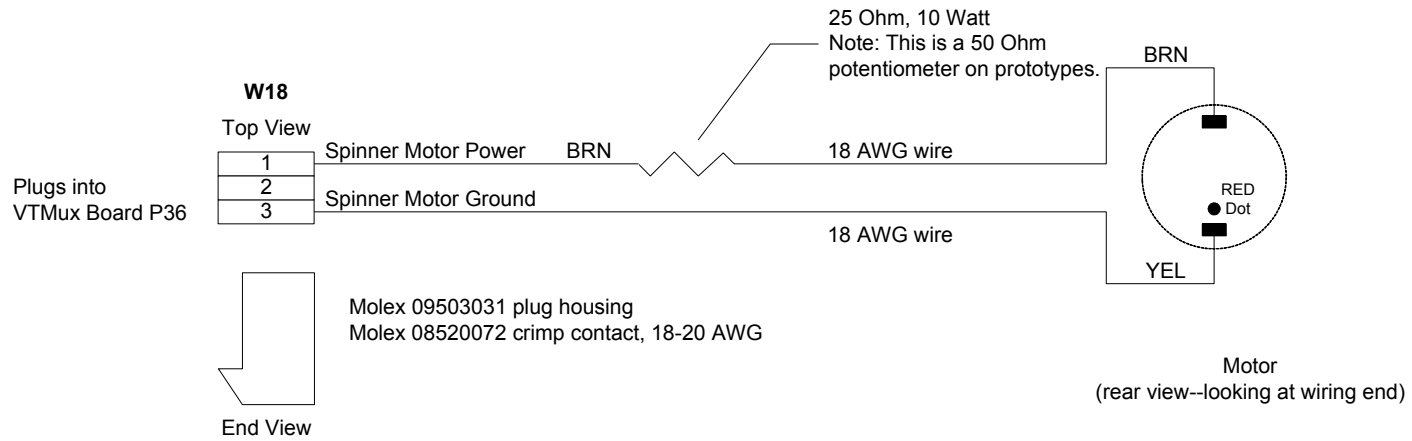

Wiring Diagrams

FIGURE 17 VTMUX BOARD P34 TO SPINNER MOTOR

Wiring Diagrams

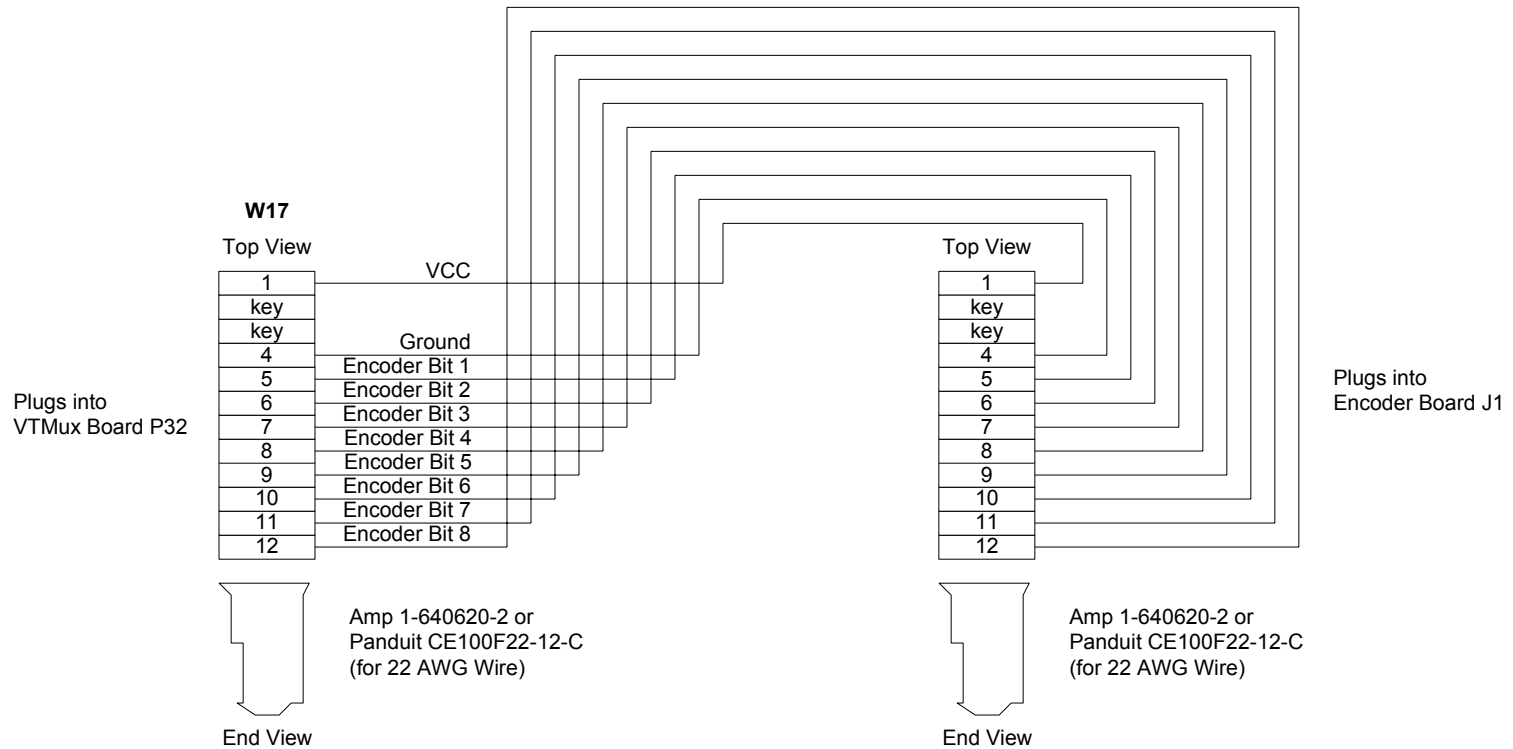


FIGURE 18 VTMUX BOARD P32 TO SPINNER SHAFT ENCODER

Wiring Diagrams

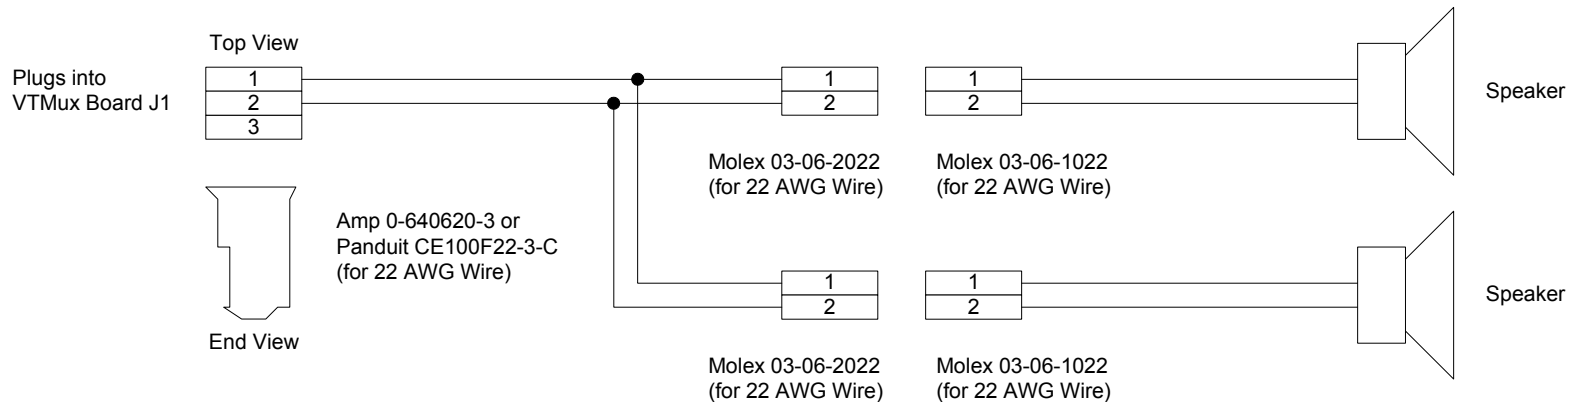


FIGURE 19 VTMUX BOARD J1 TO LOUDSPEAKER

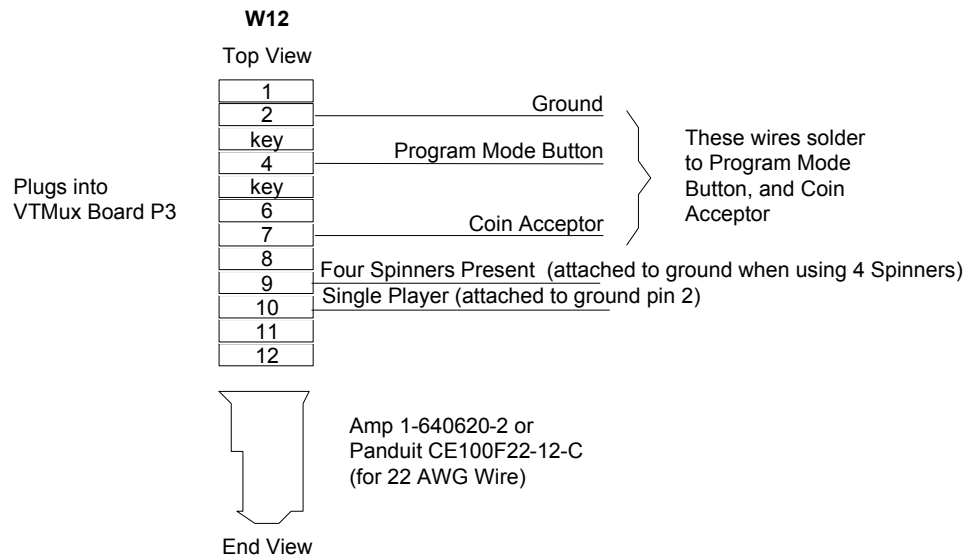


FIGURE 20 VTMUX BOARD P3 TO PROGRAM MODE BUTTON, SINGLE PLAYER,

Wiring Diagrams

FOUR SPINNERS PRESENT, AND COIN ACCEPTOR

Wiring Diagrams

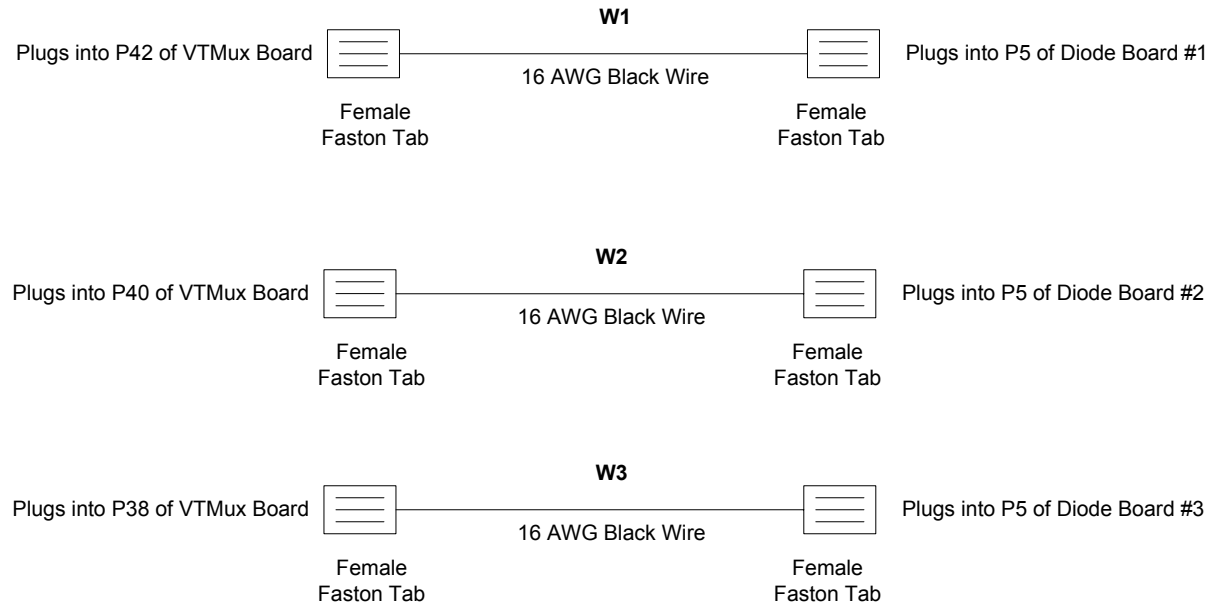


FIGURE 21 VTMUX BOARD P42, P40, AND P38 TO DIODE BOARDS P5S

Wiring Diagrams

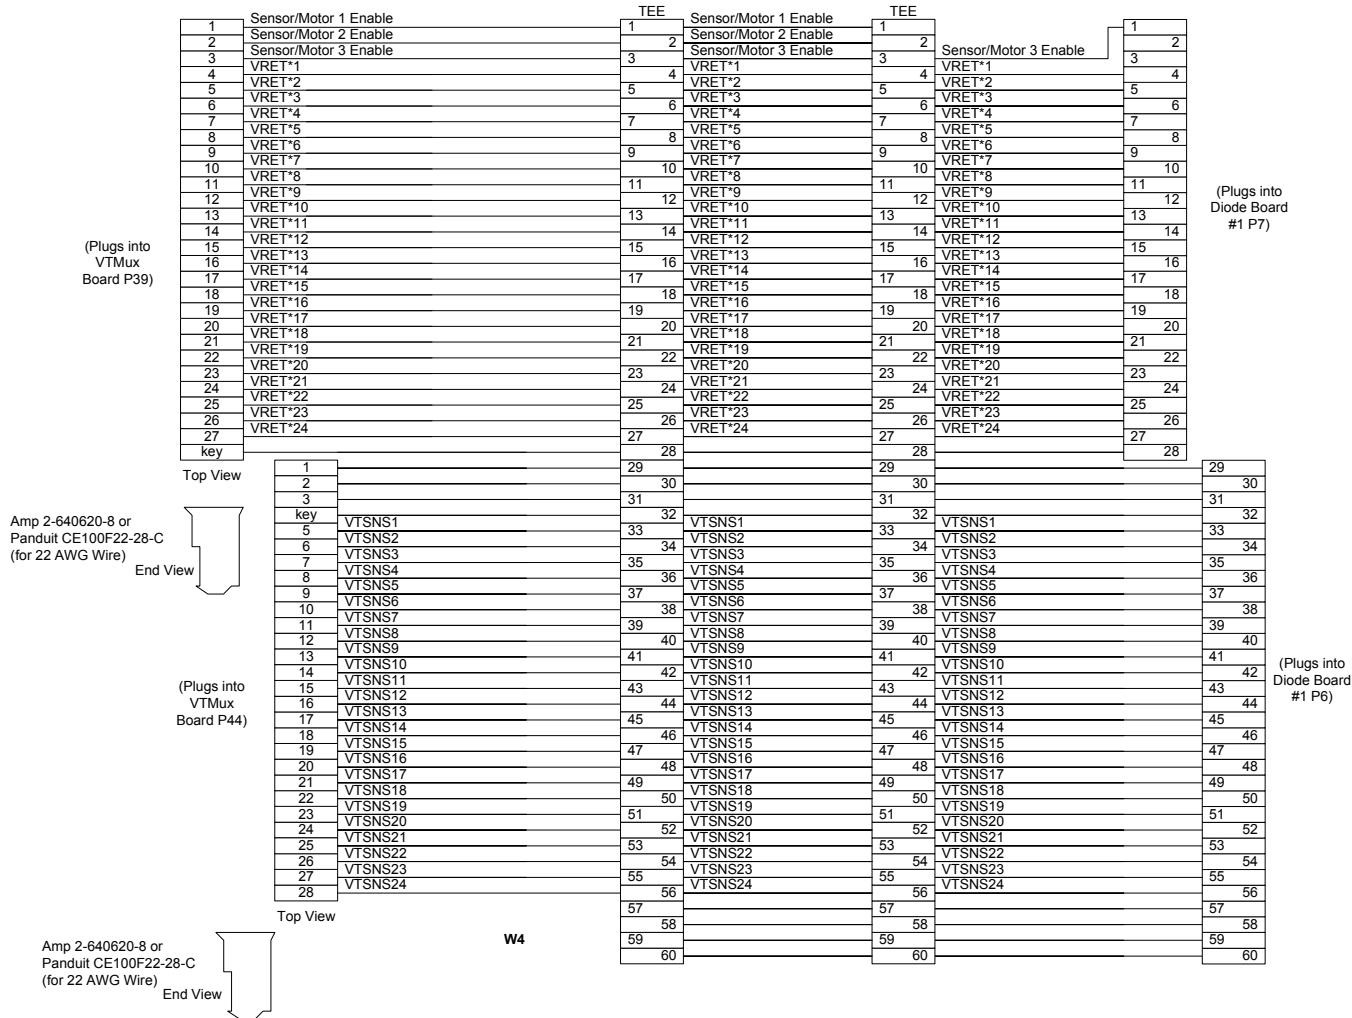


FIGURE 22 VTMUX BOARD P39 TO DIODE BOARD P7S

Wiring Diagrams

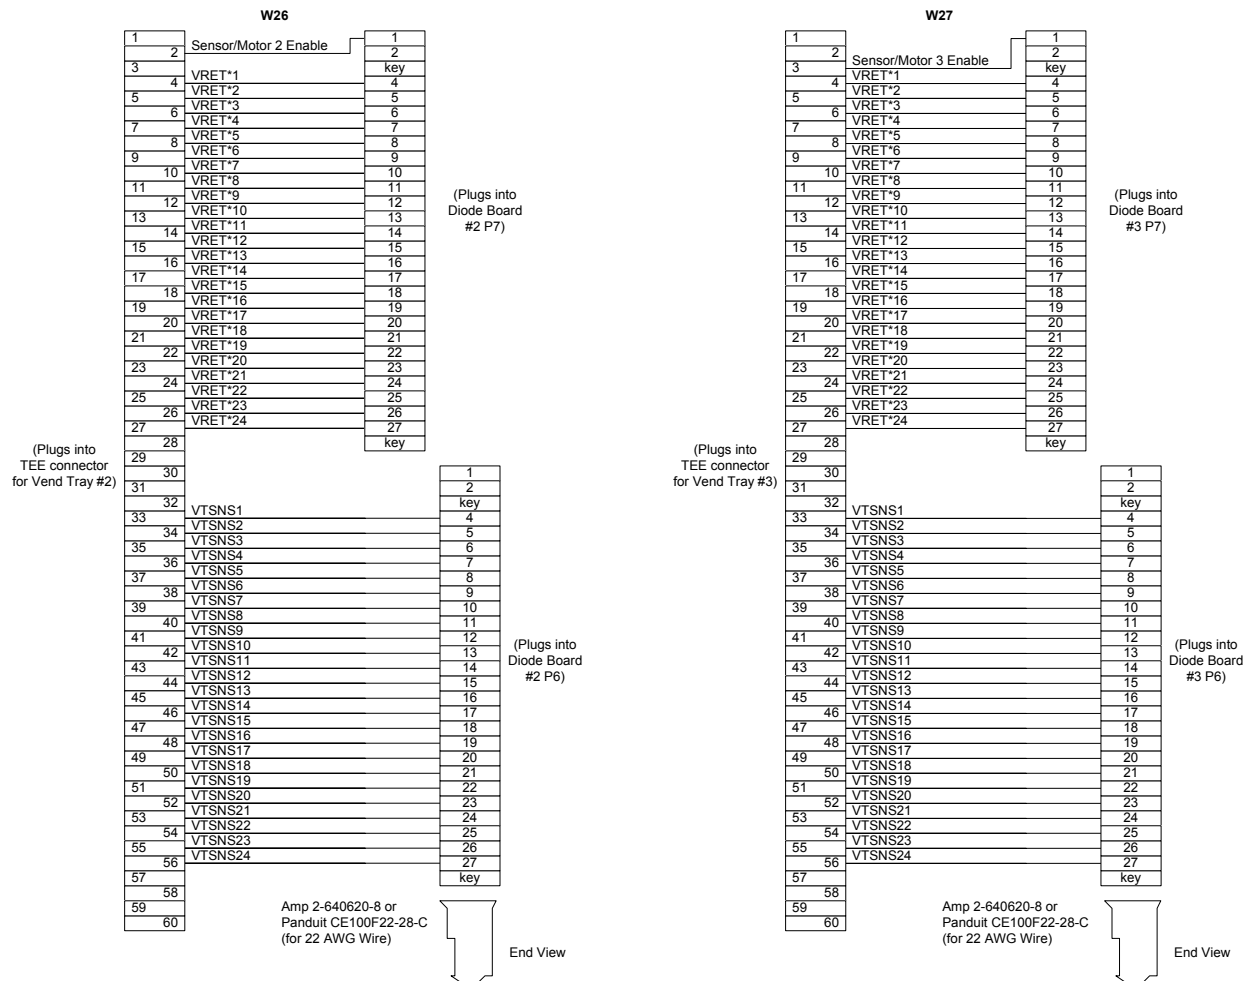


FIGURE 23A 60-PIN RIBBON CABLE TEE TO DIODE BOARD #2 P7
FIGURE 23B 60-PIN RIBBON CABLE TEE TO DIODE BOARD #3 P7

Wiring Diagrams

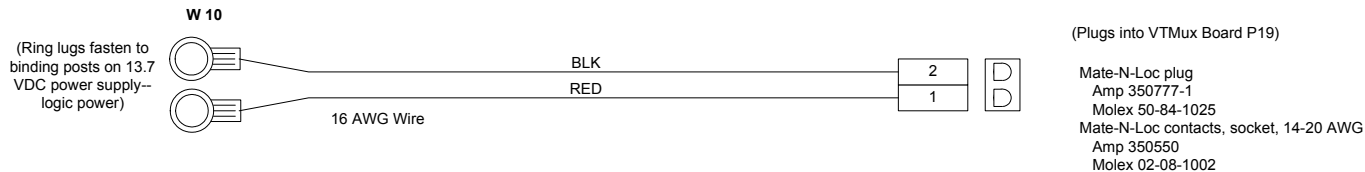


FIGURE 24 13.7 VDC POWER SUPPLY TO 8051 VTMUX BOARD P19

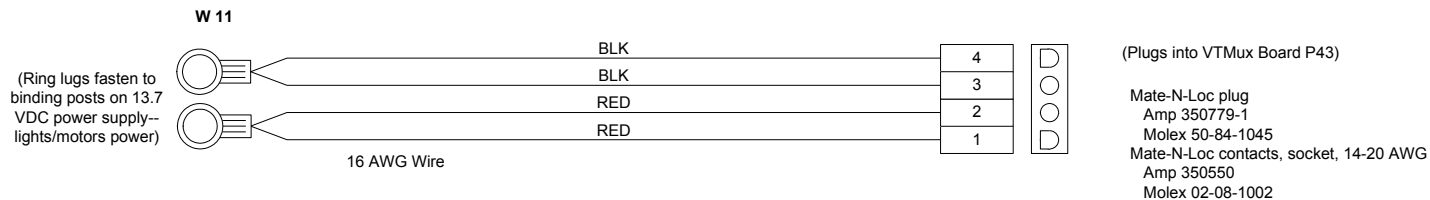


FIGURE 25 -13.7 VDC POWER SUPPLY TO 8051 VTMUX BOARD P43

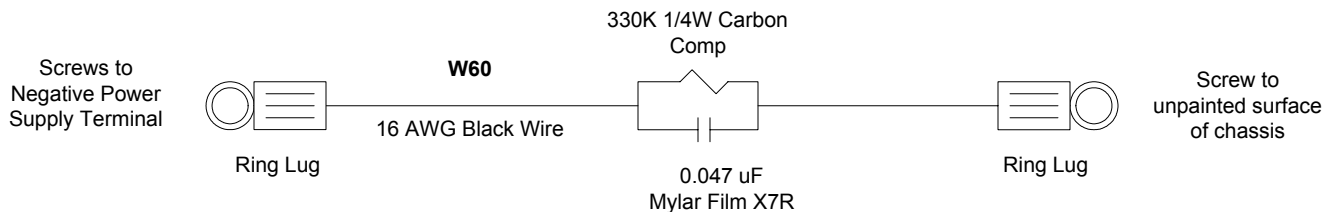


FIGURE 26 CHASSIS GROUND

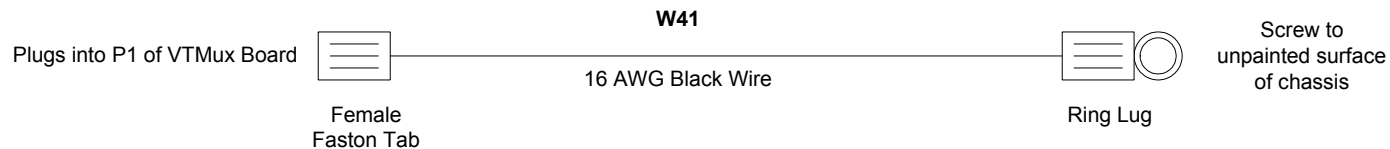


FIGURE 27 - AUDIO GROUND

Wiring Diagrams

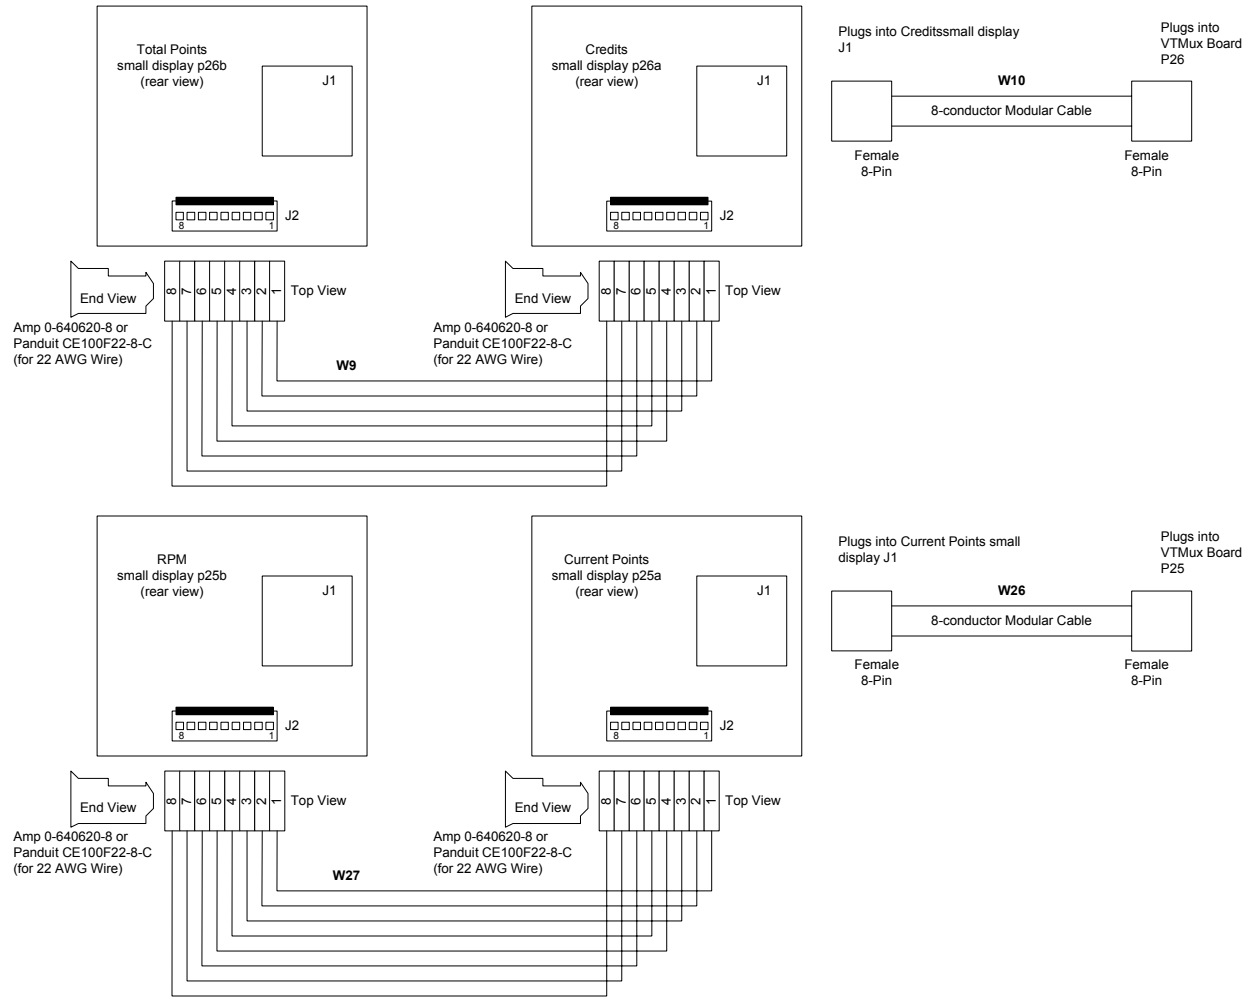


FIGURE 28A VTMUX BOARD P26 TO CREDITS SMALL DISPLAY J1
FIGURE 28B VTMUX BOARD P25 TO CURRENT POINTS SMALL DISPLAY J2

Wiring Diagrams

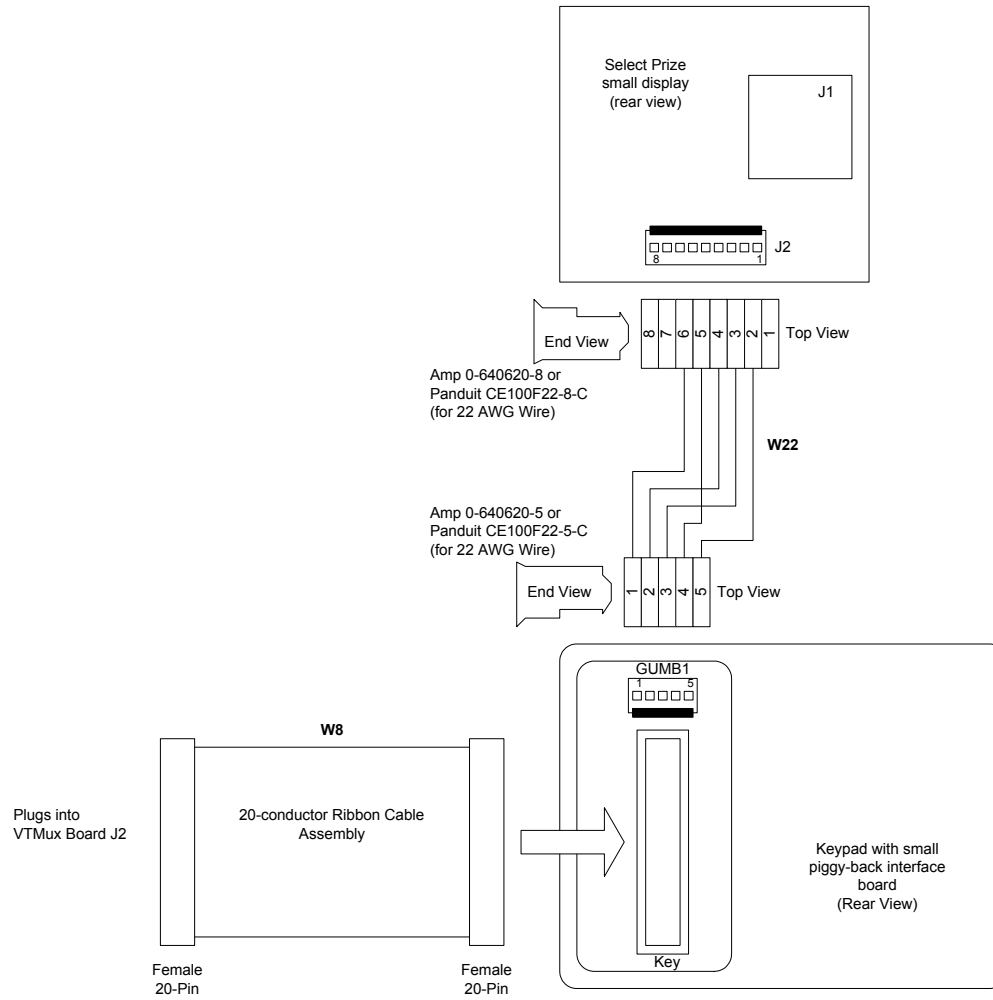


FIGURE 29A – VTMUX BOARD J2 TO KEYPAD KEY

FIGURE 29B - KEYPAD GUMB1 TO SELECT PRIZE SMALL DISPLAY J2

Wiring Diagrams


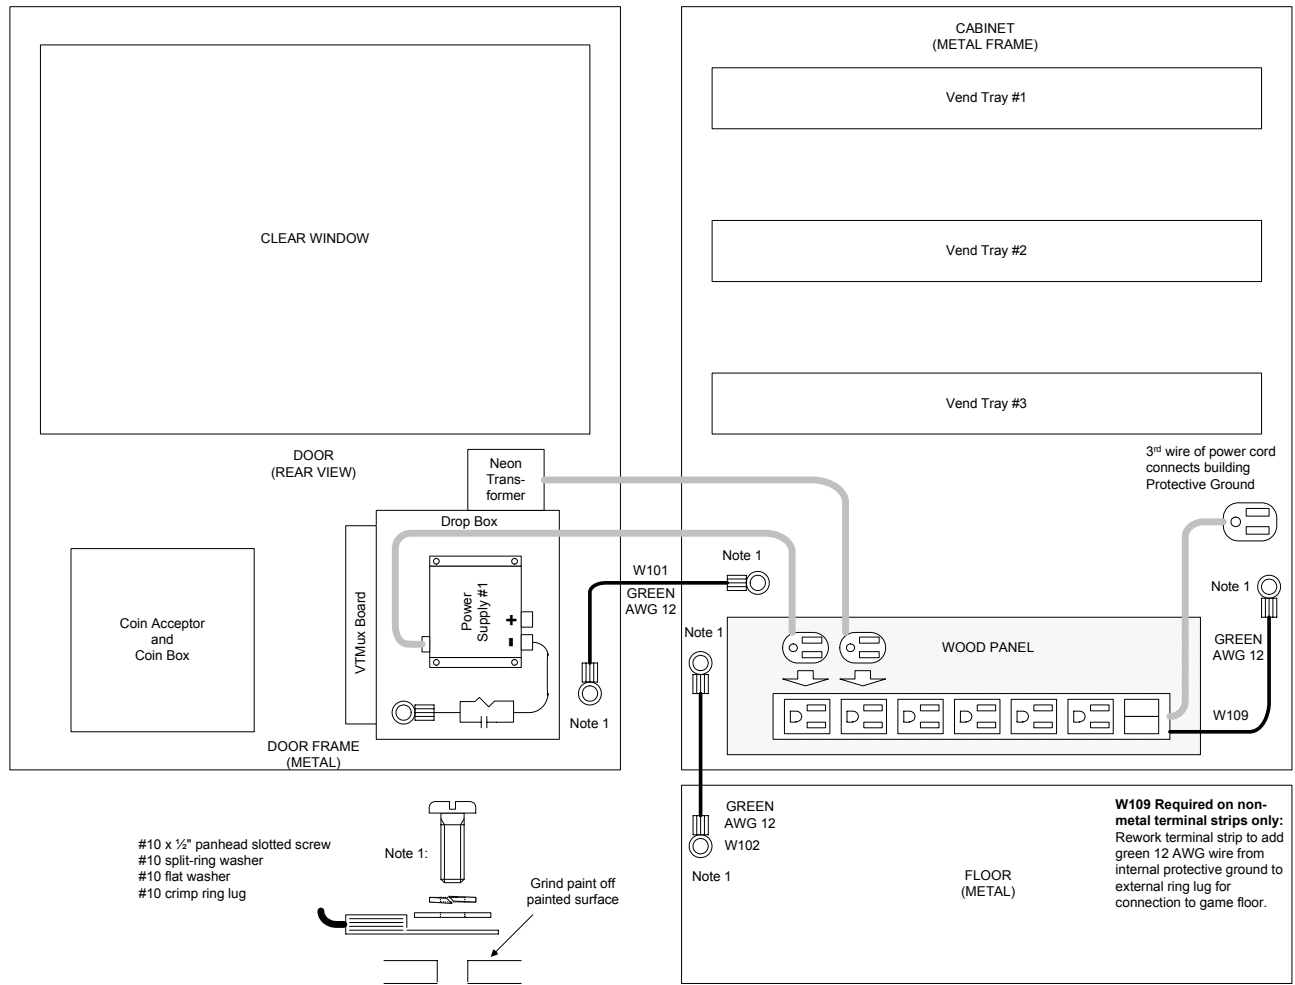


FIGURE 30 - PROTECTIVE GROUND WIRING

GAME SELF DIAGNOSTICS

Appendix A

When in Attraction mode push Call Attendant and Fast Stop pushbuttons for 10 seconds to perform Self Diagnostic #1

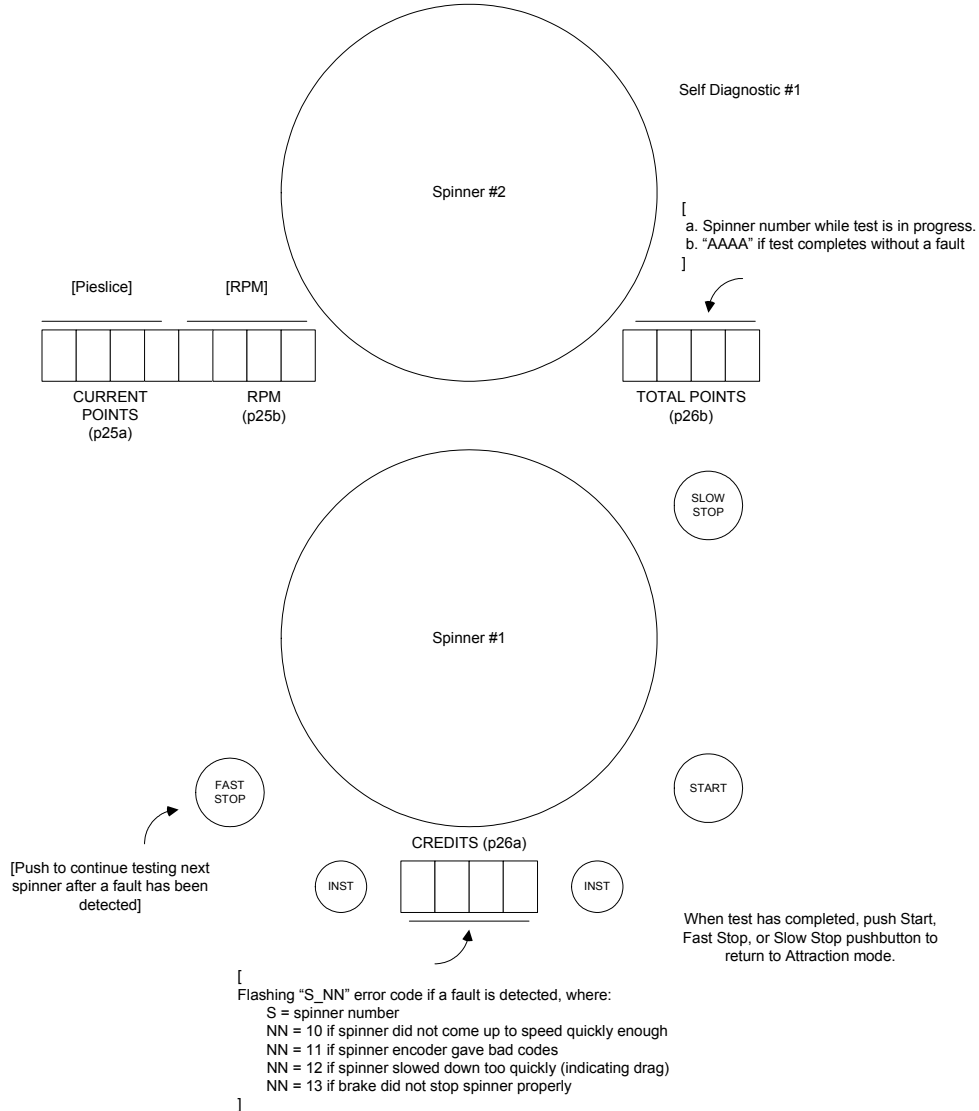

SELF DIAGNOSTIC #1 TEST LAYOUT

GAME SELF DIAGNOSTICS

SELF DIAGNOSTIC #1


To enter game diagnostics HOLD IN the *CALL ATTENDANT & FAST STOP Button's* simultaneously for approximately ten seconds. Upon a successful completion of the diagnostics the total points display should show **AAAA**.

Self Diagnostic #1 ERROR CODE CHART

Error Codes	Situation	Possible Cause	Associated Program Step # (if applicable)
10	Spinner Not Spinning or Spinning extremely slows.	Encoder or Smart Spinner Assembly	Step 76
11	Spinner is Not Maintaining Proper Speed.	Encoder or Smart Spinner Assembly	Step 76
12	Spinner is Slowing Down to Fast.	Drag on Spinner Mechanism	Step 76
13	Brake Did Not STOP Spinner.	Brake Connection	Step 76

GAME SELF DIAGNOSTICS

When in Attraction mode push Call Attendant and Slow Stop pushbuttons for 10 seconds to perform Self Diagnostic #2

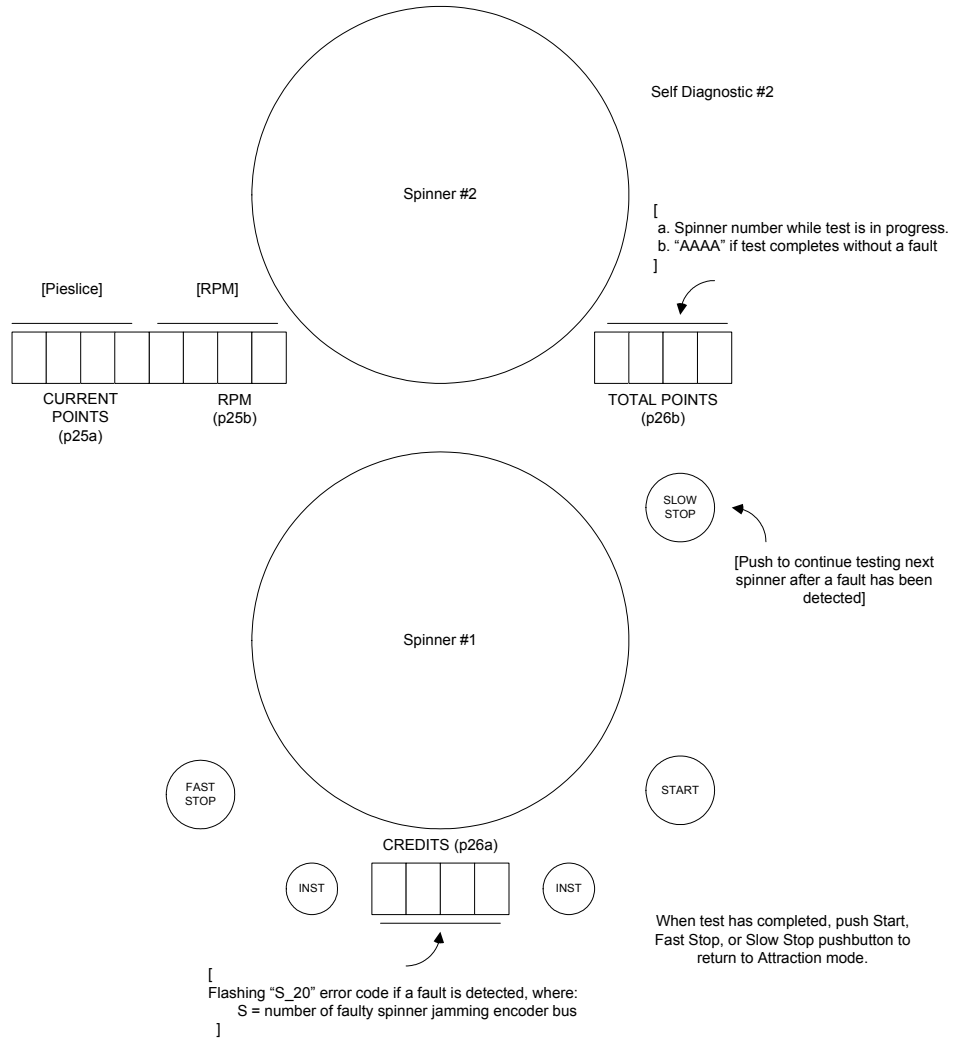

SELF DIAGNOSTIC #2 TEST LAYOUT

GAME SELF DIAGNOSTICS

SELF DIAGNOSTIC #2

To enter game diagnostics HOLD IN the *CALL ATTENDANT* & *SLOW STOP BUTTON*'s simultaneously for approximately ten seconds. Upon a successful completion of the diagnostics the total points display should show **AAAA**.

Self Diagnostic #2 ERROR CODE CHART

Error Codes	Situation	Possible Cause
21	Spinner # 1 Is Jamming the Bus.	<ul style="list-style-type: none">• Typically a bad spinner board jamming the data bus will cause a spinner's number to be displayed when its spinner isn't moving, if this occurs:<ul style="list-style-type: none">○ Check all spinner boards' switches for correct settings○ Unplug one spinner board at a time from the data bus and look for problem to go away and replace and retest any suspected bad spinner board(s)
22	Spinner # 2 Is Jamming the Bus.	
23	Spinner # 3 Is Jamming the Bus.	
24	Spinner # 4 Is Jamming the Bus.	
25	Spinner # 5 Is Jamming the Bus.	

REPLACING SPINNER

Appendix B

Troubleshooting Guide

Problem	Solution	Associated Program Step # (if applicable)
Game will not power up	<ul style="list-style-type: none"> Verify 120 VAC power is present on cabinet power strips Replace 13.7 VDC power supply 	na na
Pushbutton light does not illuminate	<ul style="list-style-type: none"> Examine and replace any burned-out lamp Measure low-voltage across terminals of lamp socket and if voltage not present when light should be on, check wiring harness Measure low-voltage at output from VTmux board and if voltage not present when light should be on, replace VTmux board and retest 	na na na
Game does not respond to pushing a flashing pushbutton	<ul style="list-style-type: none"> Check number of coins required to play setting Examine and replace any defective pushbutton Look for low-voltage changes at VTmux board input when pushbutton pushed and if voltage does not change, check wiring harness Replace VTmux board and retest 	Step 30 na na na
Does not respond when coin/token inserted	<ul style="list-style-type: none"> Examine and replace any defective coin acceptor mechanism Look for low-voltage changes at VTmux board input when coin/token inserted and if voltage does not change, check wiring harness Replace VTmux board and retest 	na na na
No sound	<ul style="list-style-type: none"> Check VOLUME potentiometer on VTmux board and turn clockwise to increase volume Examine and replace any defective speaker Check wiring harness Replace VTmux board and retest 	na na na na
Does not dispense tickets	<ul style="list-style-type: none"> Clear ticket dispenser of any jammed tickets Load tickets if empty Try dispensing a ticket using diagnostic mode, if ticket does not dispense: 	na na Step 78

TROUBLESHOOTING ASSISTANCE

	<ul style="list-style-type: none"> ○ Check wiring harness ○ Replace ticket dispenser and retest ○ Replace VTMux board and retest 	na na
Problem	Solution	Associated Program Step # (if applicable)
4-digit display always blank or shows gibberish	<ul style="list-style-type: none"> • Replace 4-digit display and retest • Replace VTMux board and retest • Check wiring harness 	na na na
Spinner light-ring does not illuminate	<ul style="list-style-type: none"> • Look for low-voltage changes at VTMux board output when light-ring should be illuminated and if voltage does not change, replace VTMux board and retest • Look for low-voltage changes at input to solid state relay when light-ring should be illuminated and if voltage does not change, check wiring harness • Look for 120 VAC voltage changes at output from solid state relay when light-ring should be illuminated: <ul style="list-style-type: none"> ○ If voltage does not change, replace solid state relay and retest ○ If voltage does change, replace light-ring and/or neon high-voltage transformer and retest (CAUTION— EXTREMELY DANGEROUS HIGH VOLTAGE) 	na na na na
Spinner does not spin	<ul style="list-style-type: none"> • Troubleshoot spinner motors 	Step 76
Spinner brake does not operate	<ul style="list-style-type: none"> • Troubleshoot spinner brakes 	Step 76
SOME spinners CONSISTENTLY give wrong POINTS	<ul style="list-style-type: none"> • Verify correct POINT programming: <ul style="list-style-type: none"> ○ Spinner #1 ○ Spinner #2 ○ Spinner #3 ○ Spinner #4 ○ Spinner #5 • Troubleshoot spinner boards and calibrate spinner(s) (requires access to spinner mechanism) • Troubleshoot spinner boards and spinner mechanism (does not require access to spinner mechanism, but does not allow calibration of spinner to TDC) 	Steps 100-115 Steps 200-215 Steps 300-315 Steps 400-415 Steps 500-515 Step 71-75 Steps 76
SOME spinners INTERMITTENTLY give wrong POINTS	<ul style="list-style-type: none"> • Troubleshoot spinners and spinner boards for intermittent problems 	Step 79
ALL spinners CONSISTENTLY	<ul style="list-style-type: none"> • Verify correct POINT programming: 	


TROUBLESHOOTING ASSISTANCE

<p>give wrong POINTS</p>	<ul style="list-style-type: none"> ○ Spinner #1 ○ Spinner #2 ○ Spinner #3 ○ Spinner #4 ○ Spinner #5 ● Troubleshoot spinner boards and wiring harness for data bus jamming 	<p>Steps 100-115</p> <p>Steps 200-215</p> <p>Steps 300-315</p> <p>Steps 400-415</p> <p>Steps 500-515</p> <p style="text-align: center;">Step 79</p>
<p>SOME spinners CONSISTENTLY cause a JUMP to wrong spinner</p>	<ul style="list-style-type: none"> ● Verify correct POSITION TYPE programming: <ul style="list-style-type: none"> ○ Spinner #1 ○ Spinner #2 ○ Spinner #3 ○ Spinner #4 ○ Spinner #5 ● Troubleshoot spinner boards and calibrate spinner(s) if required (requires access to spinner mechanism) ● Troubleshoot spinner boards and spinner mechanism (does not require access to spinner mechanism, but does not allow calibration of spinner to TDC) 	<p>Steps 150-173</p> <p>Steps 250-273</p> <p>Steps 350-373</p> <p>Steps 450-473</p> <p>Steps 550-573</p> <p style="text-align: center;">Step 71-75</p> <p style="text-align: center;">Steps 79</p>

Appendix C Replacing or Realigning Spinner Wheels

INSTRUCTIONS FOR


1. REPLACING A SPINNER'S ENCODER WHEEL or
2. REALIGNING AND TIGHTENING ENCODER WHEEL

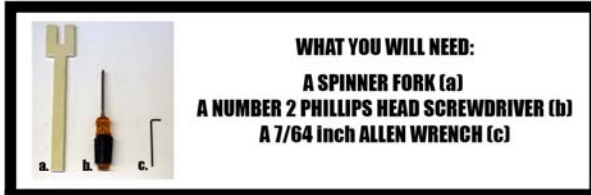

WHAT YOU WILL NEED:
A SPINNER FORK (a)
A NUMBER 2 PHILLIPS HEAD SCREWDRIVER (b)
A 7/64 inch ALLEN WRENCH (c)

STEP # 1:

Power game down. Detach any harnesses connected to the spinner. Loosen wing nuts shown and remove spinner assembly from game.

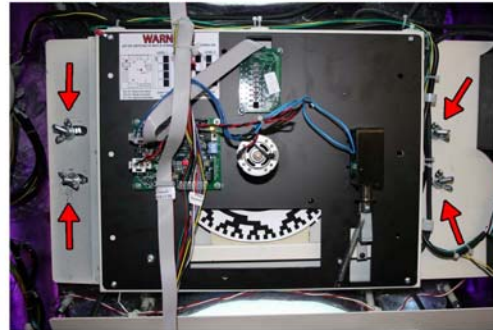


STEP # 2:

Using the 7/64 Allen Wrench, remove the two allen bolts that hold the ghost arrow to the pulley

STEP # 3

Using the # 2 phillips head screwdriver, remove the 4 screws which hold the black spinner assembly to the white main spinner bracket. Then remove the black spinner assembly from the white main spinner bracket

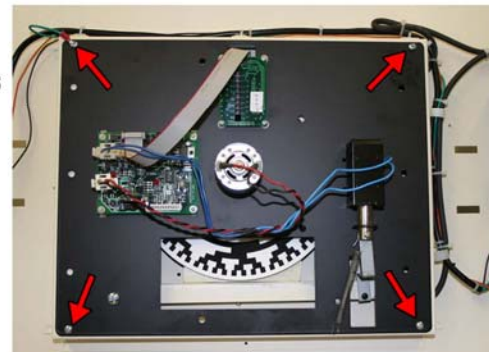


REPLACING OR REALIGNING SPINNER WHEEL

INSTRUCTIONS FOR REPLACING A SPINNER'S ENCODER WHEEL

STEP # 4

(SKIP STEP IF YOU ARE ONLY REALIGNING AND TIGHTENING)


Using the # 2 screwdriver, remove the set screw that holds the brake arm. This screw is next to the brake spring.

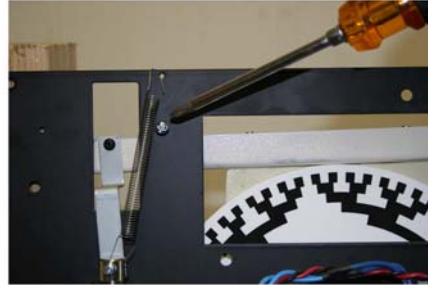

STEP # 5

(SKIP STEP IF YOU ARE ONLY REALIGNING AND TIGHTENING)



Turn the assembly around and loosen the set screw which holds the pulley to the motor shaft. Then, lift the brake arm and slide the pulley and encoder disc off.

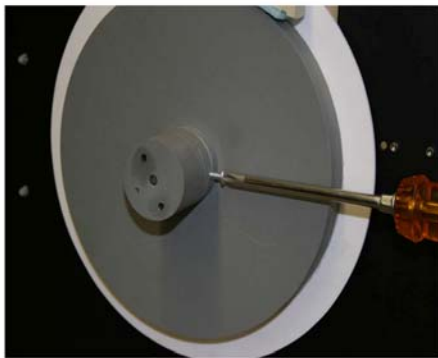

STEP # 6

(most critical step)

Slide the spinner fork against the motor shaft. Lower the pulley and encoder disc onto the motor shaft so that it rests gently upon the fork. This will give you the proper spacing. Then, tighten the set screw loosened in Step #6, and remove the spinner fork.

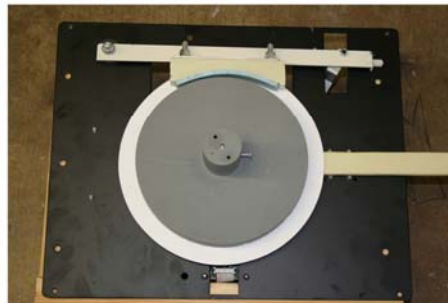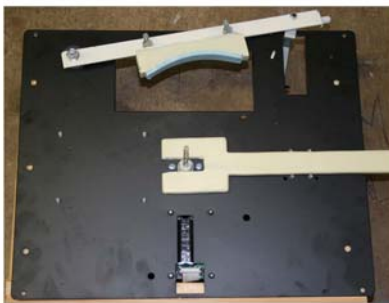

NOTE: UNITS BUILT AFTER 3/01/07 HAVE A NOTCH CUT INTO THE MOTOR SHAFT THAT THE SET SCREW TIGHTENS INTO. IF YOUR UNIT IS DATED AFTER 03/01/07 - THE SET SCREW MUST BE TIGHTENED INTO THIS NOTCH TO FUNCTION.

REPLACING OR REALIGNING SPINNER WHEEL

STEP # 7

Take a moments now to observe the new assembly. The encoder disc should not be touching the white spacers near the motor shaft . The disc should be seated about an 1/8" away from these spacers.

STEP # 8

Reattach the black spinner assembly to the white main spinner bracket . Then install the whole assembly back into the game

RECALIBRATION PROCEDURE

Using the keypad - go to the step associated with the recently replaced spinner

Step #71 = Spinner #1

Step # 72 = Spinner #2

Step #73 = Spinner #3

Step #74 = Spinner #4

Step #75 = Spinner # 5

TO ENTER PROGRAM MODE - take the keypad and hold in the # and * buttons until the keypad display goes blank. Push 1-1 on the keypad - you are now in program mode. Hold the * button down and push either 71, 72, 73, 74, or 75

By lightly tapping the FAST STOP BUTTON, move the spinner arrow until it reaches the 12 o'clock position, where there should be an alignment line. Once the point of the arrow is at 12 o'clock - hit the flashing START BUTTON. Your spinner is no recalibrated.

If you have any questions during your installation - feel free to call our technical service department directly at

(818) 775 - 9374

or, if a technician is not immediately available, please call

(818) 581 - 1772

Appendix D

TECHNICAL ASSISTANCE

Most distributors provide technical assistance for the products they sell. If your distributor cannot solve your problem, assistance can be obtained through Five Star Redemption. Call (818) 773-6057 extension 232 between the hours of 8:00 AM and 4:00 PM Pacific time, Monday through Friday, and ask for the service department.

Please have the following information available:

1. Type of Game
2. Serial Number
3. Distributor's Name
4. Description of Problem

The service technician may ask you to perform some tests on your machine, so it is preferable to call from the game's location if possible.

Five Star Redemption
ADDRESS AND TELEPHONE NUMBERS

8835 SHIRLEY AVENUE
NORTHRIDGE, CA 91324
(818) 773-6057 FAX (818) 773-6064

PARTS DEPARTMENT OPTION 1

TECHNICAL SUPPORT OPTION 2

SALES DEPARTMENT OPTION 3